

clarion®

Owner's manual
Mode d'emploi
Manual de instrucciones

DXZ825


AM/FM CD PLAYER WITH DVD/CD/MD CHANGER
CONTROL

RADIO AM/FM-LECTEUR CD AVEC COMMANDE DE CHANGEUR
DVD/CD/MD

RADIO-REPRODUCTOR AM/FM DE DISCOS COMPACTOS CON
CONTROL DE CAMBIADOR DE DVD/DISCOS COMPACTOS/
MINIDISCOS

ProAudio

carNET

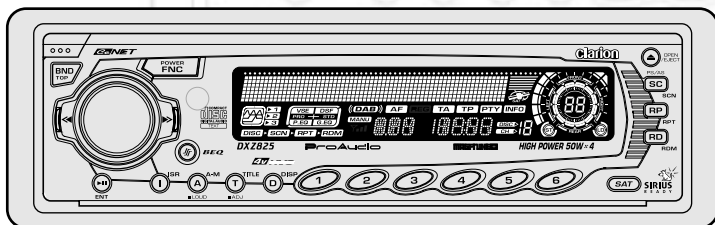

4V

**COMPACT
disc
DIGITAL AUDIO
TEXT**

**SIRIUS
READY**

Thank you for purchasing this **Clarion** product.

- * Please read this owner's manual in its entirety before operating this equipment.
- * After reading this manual, be sure to keep it in a handy place (e.g., glove compartment).
- * Check the contents of the enclosed warranty card and keep it carefully with this manual.
- * This manual includes the operating procedures of the CD changer, MD changer, AUX, DAB, DSP DVD, PHONE MUTE and TV tuner connected via the CeNET cable. The CD changer, MD changer and TV tuner have their own manuals, but no explanations for operating them are described.

Contents

1. FEATURES	2	7. OPERATIONS	13
2. PRECAUTIONS	3	Basic Operations	13
Motorized Face	4	Radio Operations	16
Handling Compact Discs	4	CD Operations	17
3. CONTROLS	5	Operations Common to Each Mode	19
4. NOMENCLATURE	6	8. OPERATIONS OF ACCESSORIES	22
Names of the Buttons and their Functions .	6	CD/MD Changer Operations	22
Major button operations when external equip-	7	TV Operations	24
ment is connected to this unit	7	DSP Operations	26
Display Items	9	Digital Radio/DAB Operations	29
LCD Screen	9	DVD Operations	33
5. REMOTE CONTROL	10	9. IN CASE OF DIFFICULTY	34
Inserting the Batteries	10	10. ERROR DISPLAYS	35
Functions of Remote Control Unit Buttons	11	11. SPECIFICATIONS	109
6. DCP	12		

1. FEATURES

- Pop-Up Rotary Encoder Volume with Rubber
- Motorized Sloping Console Detachable Aluminum Face & High Visibility Multi-Color LC Display
- Controller for Optional DVD Deck, DSP/EQ & SIRIUS/TV/DAB Tuner Modules
- CD-R/CD-RW Compatible, Built-In CD TEXT, Also Reads CD TEXT Data from Clarion Compatible CD Changer
- BEAT EQ for Sound Creation with 3 Adjustment Modes (3-Band P.EQ)
- CeNET with Balanced Audio Line Transmission and Dynamic Noise Cancelling
- **MAGITUNE**® FM Reception System
- 24-Bit/Advanced Multi-Bit D/A Converters with 128-Times Oversampling
- 8-Times Oversampling Digital Filter and Zero-Bit Detector™ Mute Circuit
- 4V / 4-Channel RCA Line Level Output/Input with Fader Control
- 4V / 2-Channel Non-Fade RCA Line Level Output with Volume Control
- 2-Channel RCA AUX Input with 3 Level Adjustments

2. PRECAUTIONS

1. When the inside of the car is very cold and the player is used soon after switching on the heater moisture may form on the disc or the optical parts of the player and proper playback may not be possible. If moisture forms on the disc, wipe it off with a soft cloth. If moisture forms on the optical parts of the player, do not use the player for about one hour. The condensation will disappear naturally allowing normal operation.
2. Driving on extremely bumpy roads which cause severe vibration may cause the sound to skip.
3. This unit uses a precision mechanism. Even in the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to consult the dealer or an experienced radio/TV technician for help.

⚠ CAUTION

USE OF CONTROLS, ADJUSTMENTS, OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN, MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.


THE COMPACT DISC PLAYER and MINI DISC PLAYER SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL.

CHANGES OR MODIFICATIONS NOT EXPRESSLY APPROVED BY THE MANUFACTURER FOR COMPLIANCE COULD VOID THE USER'S AUTHORITY TO OPERATE THE EQUIPMENT.

INFORMATION FOR USERS:

CHANGES OR MODIFICATIONS TO THIS PRODUCT NOT APPROVED BY THE MANUFACTURER WILL VOID THE WARRANTY AND WILL VIOLATE FCC APPROVAL.

MODEL		clarion
12V $\ominus$ GROUND		
AM 530-1710kHz/FM 87.9-107.9 MHz		
THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.		
THIS PRODUCTION COMPLIES WITH DHHS RULES 21 CFR SUB-CHAPTER J APPLICABLE AT DATE OF MANUFACTURE.		
CLARION CO., LTD. 50 KAMITODA, TODA-SHI, SAITAMA-KEN, JAPAN.		
051 722 877		
MANUFACTURED:		
SERIAL No.	286	Clarion Co., Ltd.
PE		MADE IN

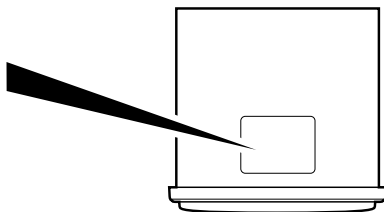

Bottom View of Source Unit

Motorized Face

This unit uses motorized face to make large-screen displays possible.

When you use the motorized face, be sure to close it.

⚠ CAUTION

BE CAREFUL NOT TO GET YOUR FINGERS CAUGHT WHEN OPENING AND CLOSING THE MOTORIZED FACE.

1. For safety's sake, always close the MOTORIZED FACE before leaving this unit unused for a prolonged period or switching OFF the ignition key.

If you switch OFF the ignition key with the MOTORIZED FACE tilted, the MOTORIZED FACE does not close.

2. Before the MOTORIZED FACE closes, there may be a sound from the safety mechanism. This is normal.
3. If you move the MOTORIZED FACE by hand, this may create play. To correct this play, with the power on for the unit, press the [▲] button to close the MOTORIZED FACE.
4. After a disc is ejected, the MOTORIZED FACE automatically returns to the tilted or closed state. If there is any obstruction when the MOTORIZED FACE tries to close, the safety mechanism is triggered and the MOTORIZED FACE returns to the open state. If this happens, remove the obstruction, then press the [▲] button.
5. To avoid scratching the compact disk, keep the 12 or 8 cm CD level when inserting or removing them.

Handling Compact Discs

Use only compact discs bearing the  mark.


Do not play heart-shaped, octagonal, or other specially shaped compact discs.

Some CDs recorded in CD-R/CD-RW mode may not be usable.

Handling

- Compared to ordinary music CDs, CD-R and CD-RW discs are both easily affected by high temperature and humidity and some of CD-R and CD-RW discs may not be played. Therefore, do not leave them for a long time in the car.

- New discs may have some roughness around the edges. If such discs are used, the player may not work or the sound may skip. Use a ball-point pen or the like to remove any roughness from the edge of the disc.

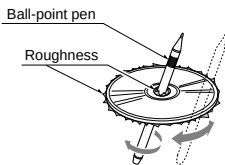

- Never stick labels on the surface of the compact disc or mark the surface with a pencil or pen.
- Never play a compact disc with any cellophane tape or other glue on it or with peeling off marks. If you try to play such a compact disc, you may not be able to get it back out of the

CD player or it may damage the CD player.

- Do not use compact discs that have large scratches, are misshapen, cracked, etc. Use of such discs may cause misoperation or damage.
- To remove a compact disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.
- Do not use commercially available CD protection sheets or discs equipped with stabilizers, etc. These may damage the disc or cause breakdown of the internal mechanism.

Storage

- Do not expose compact discs to direct sunlight or any heat source.
- Do not expose compact discs to excess humidity or dust.
- Do not expose compact discs to direct heat from heaters.


Cleaning

- To remove fingermarks and dust, use a soft cloth and wipe in a straight line from the center of the compact disc to the circumference.
- Do not use any solvents, such as commercially available cleaners, anti-static spray, or thinner to clean compact discs.
- After using special compact disc cleaner, let the compact disc dry off well before playing it.


*Be sure to unfold and read the next page. / Veuillez déplier et vous référer à la page suivante.
Cerciórese de desplegar y de leer la página siguiente.*

3.CONTROLS / LES COMMANDES / CONTROLES

Source unit / Appareil pilote / Unidad fuente

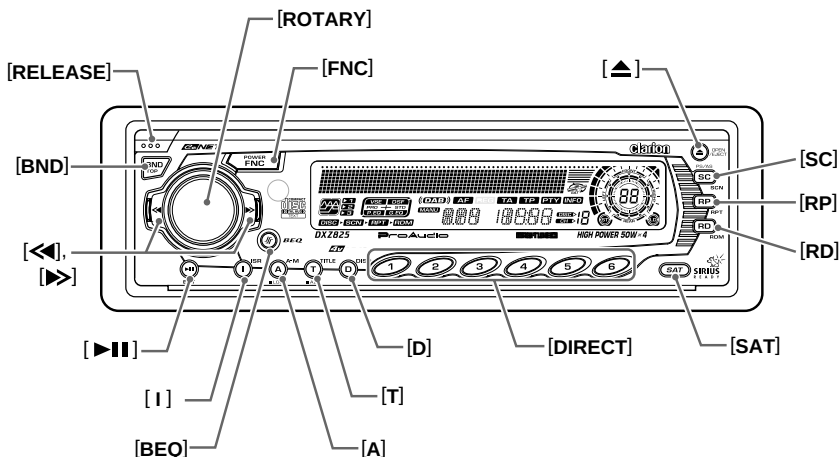

With the SLOPING CONSOLE opened / Ouvrez la CONSOLE RABATTABLE
Apertura de la CONSOLA INCLINABLE

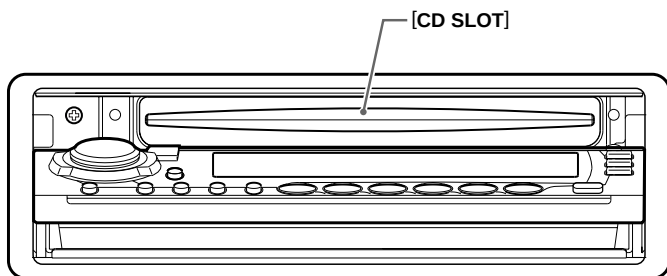

Note: Be sure to unfold this page and refer to the front diagrams as you read each chapter.

Remarque: Veuillez déplier cette page et vous référer aux schémas quand vous lisez chaque chapitre.

Nota: Cuando lea los capítulos, despliegue esta página y consulte los diagramas.

4. NOMENCLATURE

Note:

- Be sure to read this chapter referring to the front diagrams of chapter "3. CONTROLS" on page 5 (unfold).

Names of the Buttons and their Functions

[RELEASE] button

- Press the button to remove the DCP.

[ROTARY] knob

- Press the front part of the knob to adjust. The knob will pop up.
- Adjust the volume by turning the knob clockwise or counterclockwise.
- Use the knob to perform various settings.

[FNC] button

- Press the button to turn on the power.
Press and hold the button for 1 second or longer to turn off the power.
- Switches the operation mode among the radio mode, etc.

[▲] button

- Use the button to open the motorized face.
- Ejects a CD when it is loaded into the unit.

[SC] button

- Performs preset scan while in the radio mode.
When the button is pressed and held, auto store is performed.
- Performs scan play for 10 seconds for each track while in the CD mode.

[RP] button

- Repeat play while in the CD mode.

[RD] button

- Performs random play while in the CD mode.

[DIRECT] button

- Stores a station into memory or recall it directly while in the radio mode.

[D] button

- Switches the display indication(Main display, clock display).

[T] button

- Use the button to input a title in the CD mode.
- Press and hold the button for 1 second or longer to enter the adjust mode.

[A] button

- Press and hold the button for 1 second or longer to turn the loudness on or off.
- Use the button to switch to the audio mode (non fader volume/bass/mid/treble, balance/fader adjustment)

[BEQ] button

- Use the button to select one of the three types of sound characteristics already stored in memory.

[I] button

- Recalls ISR radio station in memory.
- Press and hold for 2 seconds or longer:
Stores current station into ISR memory (radio mode only).

[▶||] button

- Plays or pauses a CD while in the CD mode.

[◀◀], [▶▶] button

- Selects a station while in the radio mode or selects a track when listening to a CD. These buttons are also used to make various settings.
- Press and hold the button for 1 second or longer to switches the fast-forward/fast-backward.

[BND] button

- Switches the band, or seek tuning or manual tuning while in the radio mode.
- Plays a first track while in the CD mode.

[CD SLOT]

- CD insertion slot.

Major button operations when external equipment is connected to this unit

● When the CD/MD/DVD changer is connected

- * For details, see the section "**CD/MD changer operations**". For the DVD changer, refer to the Owner's Manual provided with the DVD changer.

[SC] button

- Performs scan play for 10 seconds for each track. Disc scan play is performed when the button is pressed and held.

[RP] button

- Performs repeat play. When this button is pressed and held, disc repeat play is performed.

[RD] button

- Performs random play. Also performs disc random play when the button is pressed and held

[DIRECT] button

- Designates the disc to be played.

[D] button

- When the button is pressed and held, switches the disc titles or track titles while in the MD changer mode.
- When the button is pressed and held, switches the user titles or track titles, etc. while in the CD changer mode.

[T] button

- Use the button to input a title in the CD changer mode.
- Use the button to scroll the title during CD-text play or MD changer play in the CD changer mode.

[▶II] button

- Plays or pauses a CD, MD or DVD.

[◀], [▶] button

- Selects a track when listening to a disc.
- Press and hold the button for 1 second or longer to switches the fast-forward/fast-backward.

[BND] button

- Plays a first track.

● When the TV/DAB is connected

- * For details, see the section "**TV operations**" or "**DAB operations**".
- * A Digital Radio (DAB) program can be received only in Canada.

[SC] button

- Performs preset scan while in the radio mode. When the button is pressed and held, auto store is performed. (This function is only TV tuner.)

[RP] button

- Press the button to turn on or off the AF (Alternative Frequency) function in the DAB mode. (This function is only DAB tuner.)

[RD] button

- Use the button to set the PTY (Programme Type) standby mode or PTY items in the DAB mode.
- Switches the TV picture mode or VTR (external) picture mode.

[DIRECT] button

- Stores a station into memory or recall it directly.

[◀], [▶] button

- Selects a station.

[BND] button

- Switches the band.
- When the button is pressed and held, switches seek tuning or manual mode.

● When the DSP is connected

- * The factory default setting is "STD" (standard).

This section describes the major buttons to be operated in the STD mode.

- * For details, see the section "**DSP Operations**".

[A] button

- Use the button to select from between G.EQ or DSF.

After G.EQ is selected, press the [D] button and then the [A] button to turn on or off the G.EQ (DSF) effect.

After G.EQ is selected, press the [BND] button and then the [DIRECT] button to select the G.EQ (DSF) menu.

[T] button

- Use the button to select the "STD" or "PRO" mode. Press and hold the [T] button for 1 second or longer to show the adjustment selection display and then press the [◀] button or [▶] button to select "AC-P SEL" in the display.

Turn [ROTARY] knob clockwise or counter-clockwise to set the mode to "STD" or "PRO".

Press [T] button to return to the previous mode.

● When the Sirius Satellite Radio is connected

* For details, refer to the Owner's Manual provided with the Sirius Satellite Radio.

[FNC] button

- Press the button to switch the operation mode among the SIRIUS mode, etc.

[SC] button

- Performs category scan while in the SIRIUS mode. When the button is pressed and held, preset scan is performed.

[DIRECT] button

- Stores a station into memory or recall it directly while in the SIRIUS mode.

[◀], [▶] button

- Press the button to select a station.

[SAT] button

- Press the button to switch the SIRIUS mode.

What is Sirius Satellite Radio?

Sirius is radio the way it was meant to be: Up to 100 new channels of digital quality programming delivered to listeners coast to coast via satellite. That means 50 channels of completely commercial-free music. Plus up to 50 more channels of news, sports, and entertainment from names like CNBC, Discovery, SCI-FI Channel, A&E, House of Blues, El, NPR, Speedvision and ESPN.


Sirius is live, dynamic entertainment, completely focused on listeners. Every minute of every day of every week will be different. All 50 commercial-free music channels are created in-house and hosted by DJs who know and love the music. Do you like Reggae? How about Classic Rock or New Rock? Sirius has an array of choices spanning a vast range of musical tastes including the hits of the 50's, 60's, 70's, & 80's as well as Jazz, Country, Blues, Pop, Rap, R&B, Bluegrass, Alternative, Classical, Heavy Metal, Dance and many others...

From its state-of-the-art, digital broadcasting facility in Rockefeller Center, New York City, Sirius will deliver the broadest, deepest mix of radio entertainment from coast to coast.

Sirius will bring you music and entertainment programming that is simply not available on traditional radio in any market across the country. It's radio like you've never heard before.

So Get Sirius and Listen Up! For more information, visit siriusradio.com.


Display Items

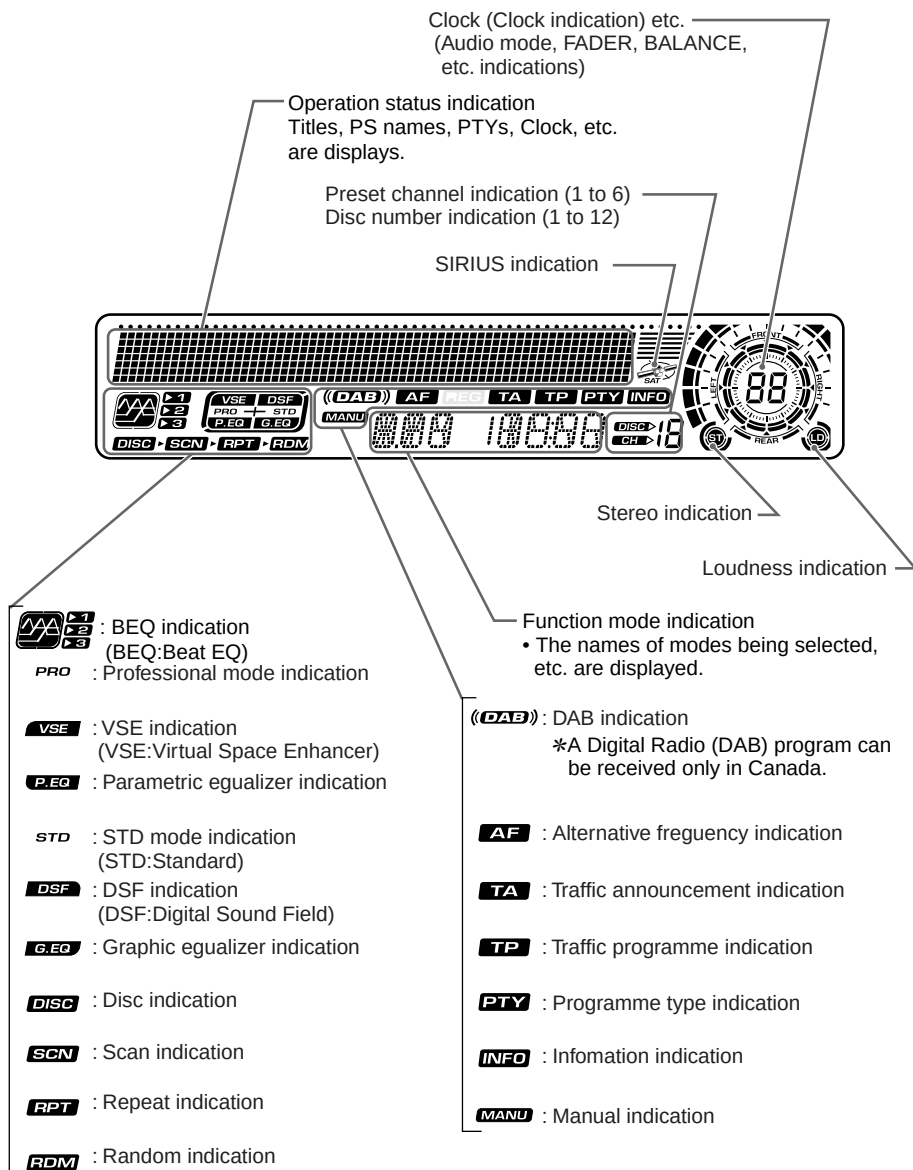


LCD Screen

In extreme cold, the screen movement may slow down and the screen may darken, but this is normal. The screen will recover when it returns to normal temperature.

5. REMOTE CONTROL

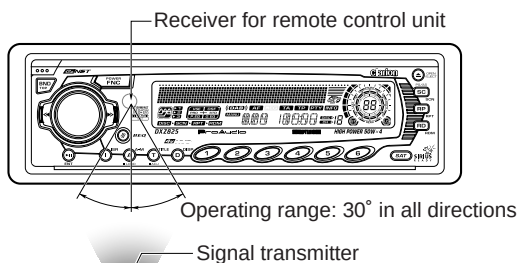

Remote control unit

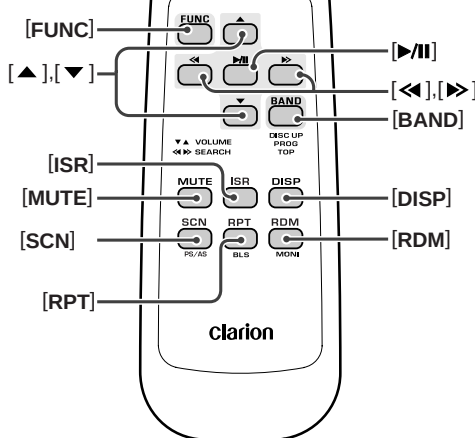


Inserting the Batteries

1. Turn the remote control unit over, then slide the rear cover in the direction of the arrow.
2. Insert the AA (SUM-3, IECR-6/1.5V) batteries that came with the remote control unit facing in the directions shown in the figure, then close the rear cover.

Notes:

Using batteries improperly can cause them to explode. Take note of the following points:

- When replacing batteries, replace both batteries with new ones.
- Do not short-circuit, disassemble or heat batteries.
- Do not dispose of batteries into fire or flames.
- Dispose of spent batteries properly.

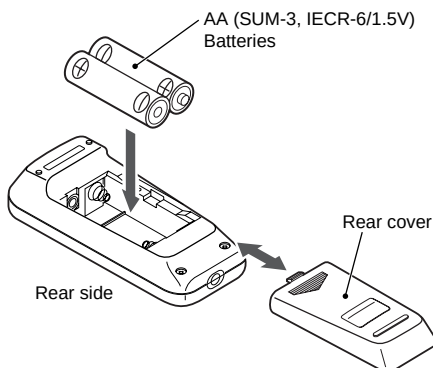

Functions of Remote Control Unit Buttons

Mode Button	Radio (DAB)	CD	CD/MD changer DVD changer	TV
[FUNC]	Switches among radio, DAB, CD, DVD deck, CD/MD changer, DVD changer, TV, and AUX.			
[BAND]	Switches reception band.	Plays the first track. Top play.	Moves the next disc in increasing order.	Switches reception band.
[▲], [▼]	Increases and decreases volume (in all modes).			
[◀], [▶]	Moves preset channels up and down.	Moves tracks up and down. When pressed and held for 1 second: Fast-forward/fast-backward.		Moves preset channels up and down.
[▶/II]	No function.	Switches between playback and pause.		No function.
[MUTE]	Turns mute on and off.			
[ISR]	Recalls ISR radio station in memory. Press and hold for 2 seconds or longer: Stores current station into ISR memory (radio mode only). TA on and off(DAB mode)			
[DISP]	Switches among main display, clock display.			
[SCN]	Preset scan. When pressed and held for 2 seconds: Auto store.	Scan play.	Scan play. When pressed and held for 1 second: Disc scan play.	Preset scan. When pressed and held for 2 seconds: Auto store.
[RPT]	AF function on and off. (DAB mode)	Repeat play.	Repeat play. When pressed and held for 1 second: Disc repeat play.	No function.
[RDM]	PTY standby mode on and off.(DAB mode)	Random play.	Random play. When pressed and held for 1 second: Disc random play.	Switches between TV and VTR.

* Some of the corresponding buttons on the main unit and remote control unit have different functions.

* A Digital Radio (DAB) program can be received only in Canada.


6. DCP

The control panel can be detached to prevent theft. When detaching the control panel, store it in the DCP (DETACHABLE CONTROL PANEL) case to prevent scratches.


We recommend taking the DCP with you when leaving the car.

Removing the DCP

1. With the MOTORIZED FACE closed, turn off the power.
2. Press the **[RELEASE]** button to open the DCP.

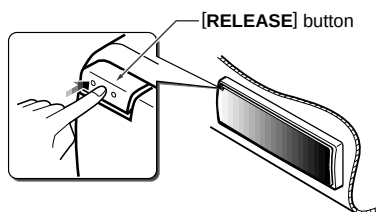

3. Pull the DCP toward you and remove it.

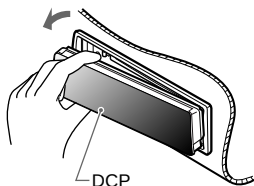


⚠ CAUTION


- Always close the MOTORIZED FACE before removing the DCP.
- If you remove the DCP with the MOTORIZED FACE open, the sloping console closes immediately. Be careful not to get your fingers caught.

Attaching the DCP

1. Insert the DCP so that the **(A)** section on the right side of the DCP catches on the hook **(B)** on the unit.

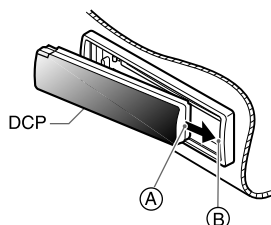

2. Press the left side **(C)** of the DCP carefully to fit it in place.

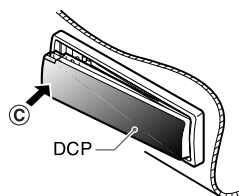

⚠ CAUTION

- Be sure to follow the procedures described in the section “Attaching the DCP” when installing the DCP.
- The DCP can easily be damaged by shocks. After removing it, be careful not to drop it or subject it to strong shocks.
- If the **[RELEASE]** button is pressed and the DCP is not locked into place, it may fall out from vibration of the car. This can break the DCP, so after removing it, either install it on the unit or put it in its DCP case.
- The connector connecting the unit and the DCP is an extremely important part. Be careful not to damage it by pressing on it with fingernails, screwdrivers, etc.

Note:

- If the DCP is dirty, wipe off the dirt with a soft, dry cloth only.

7. OPERATIONS

Basic Operations

Note: Be sure to read this chapter referring to the front diagrams of chapter "3. CONTROLS" on page 5 (unfold).

⚠ CAUTION

Be sure to lower the volume before switching off the unit power or the ignition key. The unit remembers its last volume setting. If you switch the power off with the volume up, when you switch the power back on, the sudden loud volume may hurt your hearing and damage the unit.

Turning on/off the power

Note:

• Be careful about using this unit for a long time without running the engine. If you drain the car's battery too far, you may not be able to start the engine and this can reduce the service life of the battery.

1. Press the **[FNC]** button.
2. The illumination and display on the unit light up. The unit automatically remembers its last operation mode and will automatically switch to display that mode.
3. Press and hold the **[FNC]** button for 1 second or longer to turn off the power for the unit.

Note:

• System check

The first time this unit is turned on after the wire connections are completed, it must check what equipment is connected. When the power is turned on, "SYSTEM CHCK" and "Push POWER" appear in the display alternately, so press the **[FNC]** button. The system check starts within the unit. When the system check is complete, the power is turned off, so press the **[FNC]** button again.

Selecting a mode

1. Press the **[FNC]** button to change the operation mode.
2. Each time you press the **[FNC]** button, the operation mode changes in the following order:
Radio mode → DAB mode → SIRIUS mode → CD mode → DVD deck mode → CD changer mode → MD changer mode → DVD changer mode → TV mode → AUX mode → Radio mode...
* External equipment not connected with CeNET is not displayed.
* A Digital Radio (DAB) program can be received only in Canada.
* The SIRIUS mode can be also switched using the **[SAT]** button.

Adjusting the volume

1. Press the front part of the knob to adjust. The knob will pop up.
2. Turning the **[ROTARY]** knob clockwise increases the volume; turning it counterclockwise decreases the volume.
* The volume level is from 0 (minimum) to 33 (maximum).

Switching the display

Press the **[D]** button to select the desired display. Each time you press the **[D]** button, the display switches in the following order:

Main display



Clock display



Main display

- * Once selected, the preferred display becomes the display default. When a function adjustment such as volume is made, the screen will momentarily switch to that function's display, then revert back to the preferred display several seconds after the adjustment.
- * When you have entered a title in a CD/MD, it appears in the main display. If you have not entered a title, "**[D] NO-TITLE**" or "**[T] NO-TITLE**" appears in the title display instead. For information on how to enter a title, refer to the subsection "Entering titles" in section "Operations Common to Each Mode".

Basic Operations

Setting the Beat EQ

This unit are provided with 5 types of sound tone effects stored in memory. Select the one you prefer.

* The factory default setting is "USER CUSTOM".

Each time you press the [BEQ] button, the tone effect changes in the following order:

"BASS BOOST" → "IMPACT" → "EXCITE" → "USER CUSTOM" → "TONE BYPASS" → "BASS BOOST" ...

- BASS BOOST : bass emphasized
- IMPACT : bass and treble emphasized
- EXCITE : bass and treble emphasized mid de-emphasized
- USER CUSTOM : user custom
- TONE BYPASS : no sound effect

Adjusting the tone

Press the [A] button and select the item to adjust. Each time you press the [A] button, the item changes in the following order:

● When "BASS BOOST" is set

"NON-FAD VOL" → "BASS BOOST" → "BALANCE" → "FADER" → Last function mode.

● When "IMPACT" is set

"NON-FAD VOL" → "IMPACT" → "BALANCE" → "FADER" → Last function mode.

● When "EXCITE" is set

"NON-FAD VOL" → "EXCITE" → "BALANCE" → "FADER" → Last function mode.

● When "USER CUSTOM" is set

"NON-FAD VOL" → "BASS <GAIN>" → "MID <GAIN>" → "TREB<GAIN>" → "BALANCE" → "FADER" → Last function mode.

● When "TONE BYPASS" is set

"NON-FAD VOL" → "BALANCE" → "FADER" → Last function mode.

* Pressing the [BEQ] button for 1 second or longer while in "USER CUSTOM" sets flat, and displays a "BEQ FLAT" message.

Note:

• When the separately-sold digital sound processor (DPH910) is used, the bass and treble tone adjustments cannot be made. To adjust the tone, refer to the section "DSP Operations".

Adjusting the non fader output volume

You can adjust the volume output from the unit's non fader output terminal.

1. Press the [A] button and select "NON-FAD VOL".
2. Turning the [ROTARY] knob clockwise increases the output volume; turning it counter-clockwise decreases the output volume.
 - * The factory default setting is "0". (Setting range: -6 to 6)
3. When the adjustment is complete, press the [A] button several times until the function mode is reached.

Adjusting the bass

The bass gain, bass F (center frequency) and bass Q can be adjusted as follows.

1. Press the [A] button and select "BASS <GAIN>".
2. Press the [◀◀] or [▶▶] button and select from "BASS <GAIN>" → "BASS <F 50>" → "BASS <Q 1>" → "BASS <GAIN>".
3. Turn the [ROTARY] knob clockwise or counterclockwise as needed and adjust the gain, the F (center frequency) and the Q.

BASS GAIN	: -6 to 8 (The factory default setting is "0")
BASS F	: 50Hz/80Hz/120Hz (The factory default setting is "50")
BASS Q	: 1/1.25/1.5/2 (The factory default setting is "1")
4. When the adjustment is complete, press the [A] button several times until the function mode is reached.

Adjusting the MID

The MID gain, MID F (center frequency) and MID Q can be adjusted as follows.

1. Press the [A] button and select "MID <GAIN>".
2. Press the [◀◀] or [▶▶] button and select from "MID <GAIN>" → "MID <F 1k>" → "MID <Q 2>" → "MID <GAIN>".
3. Turn the [ROTARY] knob clockwise or counterclockwise as needed and adjust the gain, the F (center frequency) and the Q.

MID GAIN	: -6 to 6 (The factory default setting is "0")
----------	--

- MID F : 700Hz/1KHz/2KHz (The factory default setting is "1k")
- MID Q : 1.5/2 (The factory default setting is "2")
- When the adjustment is complete, press the [A] button several times until the function mode is reached.

Adjusting the TREBLE

The treble gain and treble F (center frequency) can be adjusted as follows.

- Press the [A] button and select "**TREB <GAIN>**".
- Press the [◀] or [▶] button and select from "**TREB <GAIN>**" → "**TREB <F 12K>**" → "**TREB <GAIN>**".
- Turn the [ROTARY] knob clockwise or counterclockwise as needed and adjust the gain and the F (center frequency).
TREB GAIN : -6 to 6 (The factory default setting is "0")
TREB F : 8KHz/12KHz (The Factory default setting is "**12K**")
- When the adjustment is complete, press the [A] button several times until the function mode is reached.

Adjusting the balance

- Press the [A] button and select "**BALANCE**".
- Turning the [ROTARY] knob clockwise emphasizes the sound from the right speaker; turning it counterclockwise emphasizes the sound from the left speaker.
* The factory default setting is "0". (Adjustment range: L13 to R13)
- When the adjustment is complete, press the [A] button several times until the function mode is reached.

Adjusting the fader

- Press the [A] button and select "**FADER**".
- Turning the [ROTARY] knob clockwise emphasizes the sound from the front speakers; turning it counterclockwise emphasizes the sound from the rear speakers.
* The factory default setting is "0". (Adjustment range: F12 to R12)
- When the adjustment is complete, press the [A] button several times until the function mode is reached.

Adjusting the Beat EQ

- Press the [BEQ] button and select the Beat EQ mode (1 to 3) to adjust.
- Press the [A] button and select "**BASS BOOST or IMPACT or EXCITE**".
- Turning the [ROTARY] knob clockwise adjusts in the + direction; turning it counterclockwise adjusts in the - direction.
* When BASS BOOST is selected, you can adjust the bass in the range of -3 to 3.
* When IMPACT and EXCITE is selected, you can adjust the bass and treble in the range of -3 to 3.
- When the adjustment is complete, press the [A] button several times until the function mode is reached.

Turning on/off the loudness

The loudness effect emphasizes the bass to create a natural sound tone. When you are listening to music at a low volume, it is recommended to use the loudness effect.

- Press and hold the [A] button for 1 second or longer to turn on the loudness effect. When the loudness effect is turned on, "**LD**" lights in the display.
- Press and hold the [A] button for 1 second or longer to turn off the loudness effect. "**LD**" goes off in the display.

Note:

- When using a sold separately digital sound processor (DPH910), a feature called auto loudness is selected. This function is different from the loudness effect. For further details on the auto loudness feature, refer to the subsection "**Output adjustment of auto loudness, subwoofer and playback band**" in section "**DSP Operations**".

Radio Operations

FM reception

For enhanced FM performance the **MAGI-TUNE**® tuner includes signal actuated stereo control, Enhanced Multi AGC, Impulse noise reduction circuits and Multipath noise reduction circuits.

Changing the reception area

This unit is initially set to USA frequency intervals of 10kHz for AM and 200kHz for FM. When using it outside the USA, the frequency reception range can be switched to the intervals below.

● Setting the reception area

1. Press the **[BND]** button and select the desired radio band (FM or AM).
2. While pressing the **[D]** button, each time you press and hold the number "6" of the **[DIRECT]** buttons for 2 seconds or longer, the reception area switches from inside the USA to outside the USA or from outside the USA to inside the USA.
* Any station preset memories are lost when the reception area is changed.

Listening to the radio

1. Press the **[FNC]** button and select the radio mode. The frequency or PS appears in the display.
* PS: Programme service name
* A Digital Radio (DAB) program can be received only in Canada.
2. Press the **[BND]** button and select the radio band. Each time the button is pressed, the radio reception band changes in the following order:
FM1 → FM2 → FM3 → AM → FM1...
3. Press the **[◀◀]** or **[▶▶]** button to tune in the desired station.

Tuning

There are 3 types of tuning mode available, seek tuning, manual tuning and preset tuning.

Seek tuning

1. Press the **[BND]** button and select the desired band (FM or AM).
* If "MANU" is lit in the display, press and hold the **[BND]** button for 1 second or longer. "MANU" in the display goes off and seek tuning is now available.
2. Press the **[◀◀]** or **[▶▶]** button to automatically seek a station.
When the **[▶▶]** button is pressed, the station is sought in the direction of higher frequencies; if the **[◀◀]** button is pressed, the station is sought in the direction of lower frequencies.

Manual tuning

There are 2 ways available: Quick tuning and step tuning.

When you are in the step tuning mode, the frequency changes one step at a time. In the quick tuning mode, you can quickly tune the desired frequency.

1. Press the **[BND]** button and select the desired band (FM or AM).
* If "MANU" is not lit in the display, press and hold the **[BND]** button for 1 second or longer. "MANU" is lit in the display and manual tuning is now available.
2. Tune into a station.

● Quick tuning:

Press and hold the **[◀◀]** or **[▶▶]** button for 1 second or longer to tune in a station.

● Step tuning:

Press the **[◀◀]** or **[▶▶]** button to manually tune in a station.

Recalling a preset station

A total of 24 preset positions (6-FM1, 6-FM2, 6-FM3, 6-AM) exists to store individual radio stations in memory. Pressing the corresponding **[DIRECT]** button recalls the stored radio frequency automatically.

1. Press the **[BND]** button and select the desired band (FM or AM).
2. Press the corresponding **[DIRECT]** button to recall the stored station.
* Press and hold one of the **[DIRECT]** buttons for 2 seconds or longer to store that station into preset memory.

Radio Operations

Manual memory

1. Select the desired station with seek tuning, manual tuning or preset tuning.
2. Press and hold one of the [DIRECT] buttons for 2 seconds or longer to store the current station into preset memory.

Auto store

Auto store is a function for storing up to 6 stations that are automatically tuned in sequentially. If 6 receivable stations cannot be received, a previously stored station remains unoverwritten at the memory position.

1. Press the [BND] button and select the desired band (FM or AM).
 2. Press and hold the [SC] button for 2 seconds or longer. The stations with good reception are stored automatically to the preset channels.
- * If auto store is performed in the FM bands, the stations are stored in FM3 even if FM1 or FM2 was chosen for storing stations.

Preset scan

Preset scan receives the stations stored in preset memory in order. This function is useful when searching for a desired station in memory.

1. Press the [SC] button.
2. When a desired station is tuned in, press the [SC] button again to continue receiving that station.

Note:

- Be careful not to press and hold the [SC] button for 2 seconds or longer, otherwise the auto store function is engaged and the unit starts storing stations.

Instant station recall (ISR)

Instant station recall is a special radio preset that instantly accesses a favorite radio station at a touch of a button. The ISR function even operates with the unit in other modes.

●ISR memory

1. Select the station that you wish to store in ISR memory.
2. Press and hold the [I] button for 2 seconds or longer.

●Recalling a station with ISR

In any mode, press the [I] button to turn on the radio function and tune the selected radio station. "ISR" appears in the display. Press the [I] button again to return to the previous mode.

CD Operations

Loading a CD

1. Press the [▲] button. The MOTORIZED FACE opens.

⚠CAUTION

Be careful not to get your fingers caught when opening and closing the MOTORIZED FACE.

2. Insert a CD into the center of the insertion slot with the label side facing up. The CD plays automatically after loading.

Notes:

- Never insert foreign objects into the CD insertion slot.
- If the CD is not inserted easily, there may be another CD in the mechanism or the unit may require service.
- Discs not bearing the  or  mark and CD-ROMs cannot be played by this unit.

Loading 8 cm compact discs

- * No adapter is required to play an 8 cm CD.
 - * Insert the 8 cm CD into the centre of the insertion slot.
3. After loading a CD, the MOTORIZED FACE closes automatically.

Notes:

- Note that MOTORIZED FACE closes immediately after a CD is inserted into CD insertion slot.
- If no CD is loaded in the MOTORIZED FACE, it closes after 30 seconds.

Listening to a CD already inserted

Press the [FNC] button to select the CD mode. Play starts automatically. If no CD is loaded in the unit, "NO DISC" appears in the display.

Pausing play

1. Press the [▶||] button to pause play. "PAUSE" appears in the display.
2. To resume CD play, press the [▶||] button again.

CD Operations

Ejecting a CD

1. Press the [▲] button. The MOTORIZED FACE opens and a CD ejects. "EJECT" appears in the display.

⚠ CAUTION

Be careful not to get your fingers caught when opening and closing the MOTORIZED FACE.

2. Remove the CD and press the [▲] button to close the MOTORIZED FACE.

Notes:

- Be sure to close the MOTORIZED FACE after removing the CD.
- The MOTORIZED FACE closes automatically 30 seconds after removing the CD.
- * If a CD (12 cm) is left in the ejected position for 15 seconds, the CD is automatically reloaded. (Auto reload)
- * 8 cm CDs are not auto reloaded. Be sure to remove it when ejected.

Note:

- If you force a CD into before auto reloading, this can damage the CD.

Selecting a track

● Track-up

1. Press the [▶▶] button to move ahead to the beginning of the next track.
2. Each time you press the [▶▶] button, the track advances ahead to the beginning of the next track.

● Track-down

1. Press the [◀◀] button to move back to the beginning of the current track.
2. Press the [◀◀] button twice to move to the beginning of the previous track.

Fast-forward/fast-backward

● Fast-forward

Press and hold the [▶▶] button for 1 second or longer.

● Fast-backward

Press and hold the [◀◀] button for 1 second or longer.

Top function

The top function resets the CD player to the first track of the disc. Press the [BND] button to play the first track (track No. 1) on the disc.

Scan play

The scan play locates and plays the first 10 seconds of each track on a disc automatically. This function continues on the disc until it is cancelled.

- * The scan play is useful when you want to select a desired track.

1. Press the [SC] button to start scan play. "SCN" lights in the display.
2. To cancel the scan play, press the [SC] button again. "SCN" goes off from the display and the current track continues to play.

Repeat play

The repeat play continuously plays the current track. This function continues automatically until it is cancelled.

1. Press the [RP] button. "RPT" lights in the display and the current track is repeated.
2. To cancel the repeat play, press the [RP] button again. "RPT" goes off from the display and normal play resumes.

Random play

The random play selects and plays individual tracks on a disc in no particular order. This function continues automatically until it is cancelled.

1. Press the [RD] button. "RDM" lights in the display, an individual track is selected randomly and play begins.
2. To cancel the random play, press the [RD] button again. "RDM" goes off and normal play resumes.

Operations Common to Each Mode

Entering titles

Titles up to 10 characters long can be stored in memory and displayed for CD, CD changer and TV stations. The number of titles that can be entered for each mode are as follows.

Mode	Number of titles
CD mode	50 titles
TV mode	15 titles

CD changer mode	Number of titles
DCZ625 connected	100 titles
CDC1255z connected	50 titles

1. Press the **[FNC]** button to select the mode you want to enter a title (CD, CD changer or TV).
2. Select and play a CD in the CD changer or tune in to a TV station for which you want to enter the title.
3. Press the **[D]** button and display the main.
4. Press the **[T]** button. "TTL" appears in the display and the cursor position flashes.
5. Press the **[◀◀]** or **[▶▶]** button to move the cursor.
6. Press the **[D]** button to select a character. Each time you press the **[D]** button, the character changes in the following order:
Capital letters → Small letters → Numbers and Symbols → Umlaut → Capital letters...
7. Turn the **[ROTARY]** knob to select the desired character. Turning the **[ROTARY]** knob clockwise moves the cursor to the next character; turning it counterclockwise moves the cursor to the previous character.
8. Repeat steps 5 to 7 to enter up to 10 characters for the title.
9. Press and hold the **[▶|||]** button for 2 seconds or longer to store the title into memory and cancel title input mode.

Clearing titles

1. Select and play a CD in the CD changer or tune in to a TV station for which you want to clear the title.
2. Press the **[D]** button and display the main.
3. Press the **[T]** button. "TTL" appears in the display and the display switches to the title input display.
4. Press the **[BND]** button.

5. Press and hold the **[▶|||]** button for 2 seconds or longer to clear the title and cancel title input mode.

Turning the external output adjustment display on/off

When not using the external output, you can turn off the "NON-FADER" display.

- * The factory default setting is "ON".
 - * Even if the level adjustment display is set to "OF", signals can be output from the external output.
1. Press and hold **[T]** button for 1 second or longer to switch to the adjustment selection display.
 2. Press the **[◀◀]** or **[▶▶]** button to select "NON-FADER".
 3. Turn the **[ROTARY]** knob clockwise to set "ON" or counterclockwise to set "OF".
 - **ON:**
When you press the **[A]** button, the "NON-FAD VOL" item is displayed.
* The output level can be adjusted.
 - **OF:**
Even when you press **[A]** button, the "NON-FAD VOL" item is not displayed.
* The output level cannot be adjusted.
 4. Press **[T]** button to return to the previous mode.

Adjusting the dimmer level

You can adjust the reduced illumination level of the dimmer.

- * The factory default setting is "3".
 - * To use the dimmer, set the dimmer setting to 1 to 5.
1. Press and hold the **[T]** button for 1 second or longer to switch to the adjustment selection display.
 2. Press the **[◀◀]** or **[▶▶]** button to select "DIMMER LV".
 3. Turn the **[ROTARY]** knob clockwise or counterclockwise to adjust the reduced illumination level of the dimmer.
 - **1 to 5:**
The dimmer operation is performed depending on the set level 1 to 5.
 - **OF:**
No dimmer operation is performed.
 4. Press the **[T]** button to return to the previous mode.

Operations Common to Each Mode

Adjusting the display contrast

You can adjust the display contrast to match the angle of installation of the unit.

* The factory default setting is "8". (Adjustment level: 1 to 18)

1. Press and hold the [T] button for 1 second or longer to switch to the adjustment selection display.
2. Press the [◀] or [▶] button to select "CON-TRAST".
3. Turn the [ROTARY] knob clockwise or counterclockwise to adjust the contrast.
4. Press the [T] button to return to the previous mode.

Setting the button illumination

* The factory default setting is "ILLM GREEN".

1. Press and hold the [T] button for 1 second or longer to switch to the adjustment selection display.
2. Press the [◀] or [▶] button and select "KEY ILLUM".
3. Turn the [ROTARY] knob clockwise or counterclockwise as needed and select from "ILLM GREEN" and "ILLM RED".
4. Press the [T] button to return the previous mode.

Switching the screen saver


* The factory default setting is "RANDOM".

1. Press and hold the [T] button for 1 second or longer to switch to the adjustment selection display.
2. Press the [◀] or [▶] button and select "AUTO SS".
3. Press the [▶||] button.
4. Turn the [ROTARY] knob clockwise or counterclockwise as needed to switch to "SS RANDOM".
"SS RANDOM" ↔ "SS Ptn3" ↔ "SS Ptn2" ↔ "SS Ptn1" ↔ "SS OFF".
5. Press the [T] button to return the previous mode.

•SS Pth1



•SS Pth2



•SS Pth3



Message display

When the unit is powered on or off, a message is displayed. The user can turn this message display ON or OFF.

* The factory default setting is "ON".

1. Press and hold the [T] button for 1 second or longer to switch to the adjustment selection display.
2. Press the [◀] or [▶] button to select "MESSAGE".
3. Turn the [ROTARY] knob clockwise or counterclockwise to set the message display ON or OFF.
4. Press the [T] button to return to the previous mode.

Setting the method for Ttitle scroll

Set how to scroll in CD-TEXT or MD.

* The factory default setting is "ON".

1. Press and hold the [T] button for 1 second or longer to switch to the adjustment selection display.
2. Press the [◀] or [▶] button and select "AUTO SCROLL".
3. Turn the [ROTARY] knob clockwise or counterclockwise and select "ON" or "OF".
 - ON:
To scroll automatically.
 - OF:
To scroll just 1 time when the title was changed or the title key was pressed.
4. Press the [T] button to return the previous mode.

AUX function

This system has an external input jack so you can listen to sounds and music from external devices connected to this unit.

Selecting AUX IN sensitivity

Make the following settings to select the sensitivity when sounds from external devices connected to this unit are difficult to hear even after adjusting the volume.

* The factory default setting is "SENS MID".

1. Press and hold the [T] button for 1 second or longer to switch to the adjustment selection display.
2. Press the [◀◀] or [▶▶] button and select "AUX SENS".
3. Turn the [ROTARY] knob clockwise or counterclockwise as needed and select from "SENS HIGH", "SENS MID" or "SENS LOW".
4. Press the [T] button to return to the previous mode.

Setting the clock

1. Press and hold the [T] button for 1 second or longer to switch to the adjustment selection display.
2. Press the [◀◀] or [▶▶] button to select "CLOCK".
3. Press the [▶|||] button.
4. Press the [◀◀] or [▶▶] button to select the hour or the minute.
5. Turn the [ROTARY] knob clockwise or counterclockwise to set the correct time.

* The clock is displayed in 12-hour format.

6. Press the [▶|||] button to store the time into memory.
7. Press the [T] button to return to the previous mode.

Note:

- You cannot set the clock when it is displayed with only the ignition on. If you drain or remove the car's battery or take out this unit, the clock is reset. While setting the clock, if another button or operation is selected, the clock set mode is canceled.

Triggered audio mute for cellular telephones

This unit requires special wiring to mute the audio signal automatically when a cellular telephone rings in the car.

- * This function is not compatible with all cellular telephones. Contact your local authorized Clarion dealer for information on proper installation and compatibility.

8. OPERATIONS OF ACCESSORIES

CD/MD Changer Operations

CD/MD changer functions

When an optional CD/MD changer is connected through the CeNET cable, this unit controls all CD/MD changer functions. This unit can control a total of 2 changers (MD and/or CD).

Press the **[FNC]** button and select the CD(MD) changer mode to start play. If 2 CD(MD) changers are connected, press the **[FNC]** button to select the CD(MD) changer for play.

- * If **"NO MAGAZINE"** appears in the display, insert the magazine into the CD changer. **"DISC CHECK"** appears in the display while the player loads (checks) the magazine.
- * If **"NO DISC"** appears in the display, eject the magazine and insert discs into each slot. Then, reinsert the magazine back into the CD changer.
- * If **"NO DISC"** appears in the display, load MDs into the MD changer.

⚠ CAUTION

CD-ROM discs cannot be played in the CD changer.

Pausing play

1. Press the **[▶|||]** button to pause play. **"PAUSE"** appears in the display.
2. To resume play, press the **[▶|||]** button again.

Displaying CD titles

This unit can display title data for CD-text CDs and user titles input with this unit.

1. Press the **[D]** button to display the title.
2. Each time you press and hold the **[D]** button for 1 second or longer, the title display changes in the following order:

User title (disc) → CD-text title (disc) → Artist name → CD-text title (track) → user title (disc)...

Note:

- If the CD playing is not a CD-text CD or no user title has been input, **"NO-TITLE"** appears in the display.

Switching disc titles and track titles(MD)

This unit can display disc titles and track titles already entered on MDs. Titles up to 128 characters long can be displayed by scrolling the titles.

- * Titles cannot be entered for MDs with this unit.

1. Press the **[D]** button to display the title. The disc title or track title is displayed.
2. Each time you press and hold the **[D]** button for 1 second or longer, the display toggles between the disc title and the track title.

Procedure to scroll a title

Set **"AUTO SCROLL"** to **"ON"** or **"OF"**. (The factory default setting is **"ON"**. Refer to the subsection **"Setting the method for Title scroll"** in section **"Operation common to each mode"**.)

● When set to "ON"

The title is automatically kept scrolling.

● When set to "OF"

Press the **[T]** button to scroll the title.

Selecting a CD

Each **[DIRECT]** button corresponds to a disc loaded into the magazine.

● Selecting a disc from 1 to 6

Press the corresponding **[DIRECT]** button (1 to 6) to select the desired disc.

● Selecting a disc from 7 to 12 (only when a 12 disc CD changer is used.)

Press and hold the **[DIRECT]** button (1 to 6) for 1 second or longer to select the desired disc.

- * If a CD is not loaded in a slot of magazine, pressing the **[DIRECT]** button corresponding to its disc number is invalid.

Selecting an MD

Each **[DIRECT]** button corresponds to an MD loaded into the MD changer. Press the corresponding **[DIRECT]** button (1 to 6) to select the desired disc.

- * If an MD is not loaded in a slot of MD changer, pressing the **[DIRECT]** button corresponding to its disc number is invalid.

Selecting a track

●Track-up

1. Press the [▶▶] button to move ahead to the beginning of the next track.
2. Each time you press the [▶▶] button, the track advances ahead to the beginning of the next track.

●Track-down

1. Press the [◀◀] button to move back to the beginning of the current track.
2. Press the [◀◀] button twice to move to the beginning of the previous track.

Fast-forward/fast-backward

●Fast-forward

Press and hold the [▶▶] button for 1 second or longer.

●Fast-backward

Press and hold the [◀◀] button for 1 second or longer.

Top function(CD)

The top function plays from the first track (track No. 1) of the disc.

●When playing a disc 1 to 6

Press the [DIRECT] button (1 to 6) with the same number as the CD playing.

●When playing a disc 7 to 12 (only when a 12 disc CD changer is used.)

Press and hold for 1 second or longer the [DIRECT] button (1 to 6) with the same number as the CD playing.

* If a CD is not loaded in a slot of magazine, pressing the [DIRECT] button corresponding to its disc number is invalid.

Top function(MD)

The top function plays from the first track (track No. 1) of the disc. Press the [DIRECT] button (1 to 6) with the same number as the MD playing.

* If an MD is not loaded in a slot of MD changer, pressing the [DIRECT] button corresponding to its disc number is invalid.

Scan play

Scan play locates and plays the first 10 seconds of each track on a disc automatically. This function continues on the disc until it is cancelled.

* The scan play is useful when you want to select a desired track.

1. Press the [SC] button to start track scanning. "SCN" lights in the display.
2. To cancel the scan play, press the [SC] button again. "SCN" goes off from the display and the current track continues to play.

Disc scan play

Disc scan play locates and plays the first 10 seconds of the first track on each disc in the currently selected CD (MD) changer. This function continues automatically until it is cancelled.

* Disc scan play is useful when you want to select a desired CD (MD).

1. Press and hold the [SC] button for 1 second or longer. "DISC" and "SCN" light in the display and disc scan play starts.
2. To cancel disc scan play, press the [SC] button again. "DISC" and "SCN" go off from the display and the current track continues to play.

Repeat play

Repeat play continuously plays the current track. This function continues automatically until it is cancelled.

1. Press the [RP] button. "RPT" lights in the display and the current track is repeated.
2. To cancel repeat play, press the [RP] button again. "RPT" goes off from the display and normal play resumes.

Disc repeat play

After all the tracks on the current disc have been played, disc repeat play automatically replays the current disc over from the first track. This function continues automatically until it is cancelled.

1. Press and hold the [RP] button for 1 second or longer. "DISC" and "RPT" light in the display and disc repeat play starts.
2. To cancel disc repeat play, press the [RP] button again. "DISC" and "RPT" go off from the display and normal play resumes on the current track.

CD/MD Changer Operations

Random play

Random play selects and plays individual tracks on the disc in no particular order. This function continues automatically until it is cancelled.

1. Press the **[RD]** button. "**RDM**" lights in the display and random play begins.
2. To cancel random play, press the **[RD]** button again. "**RDM**" goes off from the display and normal play resumes.

Disc random play

The disc random play selects and plays individual tracks or discs automatically in no particular order. This function continues automatically until it is cancelled.

1. Press and hold the **[RD]** button for 1 second or longer. "**DISC**" and "**RDM**" light in the display and disc random play starts.
2. To cancel disc random play, press the **[RD]** button again. "**DISC**" and "**RDM**" go off from the display and normal play resumes from the current track.

TV Operations

TV tuner functions

When an optional TV tuner is connected through the CeNET cable, this unit controls all TV tuner functions. To watch TV requires a TV tuner and monitor.

Watching a TV

1. Press the **[FNC]** button and select the TV mode.
2. Press the **[BND]** button to select the desired TV band (TV1 or TV2). Each time the button is pressed, the input selection toggles between TV1 and TV2.
3. Press the **[◀]** or **[▶]** button to tune in the desired TV station.

Watching a video

The TV tuner has a VTR input terminal to which 1 external device can be connected. Connect a 12 V video cassette player (VCP) or video cassette recorder (VCR) to the TV tuner input terminal.

1. Press the **[RD]** button to select VTR.
2. To return to the TV broadcast, press the **[RD]** button.

Tuning

There are 3 types of tuning mode available, Seek tuning, manual tuning and preset tuning.

Seek tuning

1. Press the **[BND]** button and select the desired TV band (TV1 or TV2).
 - * If "**MANU**" is lit in the display, press and hold the **[BND]** button for 1 second or longer. "**MANU**" in the display goes off and seek tuning is now available.
2. Press the **[◀]** or **[▶]** button to automatically seek a station.
 - Press the **[▶]** button to automatically tune up the frequency band to the next available TV station; press the **[◀]** button to automatically tune down.

Manual tuning

There are 2 ways available: Quick tuning and step tuning.

When you are in the step tuning mode, the frequency changes one step at a time. In the quick tuning mode, you can quickly tune the desired frequency.

1. Press the **[BND]** button and select the desired band (TV1 or TV2).
 - * If "MANU" is not lit in the display, press and hold the **[BND]** button for 1 second or longer. "MANU" lights in the display and manual tuning is now available.

2. Tune into a station.

● Quick tuning:

Press and hold the **[◀◀]** or **[▶▶]** button for 1 second or longer to tune in a station.

● Step tuning:

Press the **[◀◀]** or **[▶▶]** button to manually tune in a station.

Recalling a preset station

A total of 12 TV stations can be stored (6-TV1 and 6-TV2). This allows you to select your favorite TV stations and store them in memory for later recall.

1. Press the **[BND]** button and select the desired TV band (TV1 or TV2).
2. To recall a stored TV station, press the desired **[DIRECT]** button to select that station.
 - * Press and hold one of the **[DIRECT]** buttons for 2 seconds or longer to store the current station into preset memory.

Manual memory

1. Select the desired station with seek tuning, manual tuning or preset tuning.
2. Press and hold one of the **[DIRECT]** buttons for 2 seconds or longer to store the current station into preset memory.

Auto store

Auto store selects 6 TV stations automatically and stores each one into preset memory.

If there are not 6 stations with good reception, stations previously stored in memory remain and only the strong stations are stored into memory.

1. Press the **[BND]** button and select the desired TV band (TV1 or TV2).
2. Press and hold the **[SC]** button for 2 seconds or longer. The stations with good reception are stored automatically to the preset channels.

Preset scan

Preset scan allows the user to view each preset position before it automatically advances to the next preset. This function is useful for searching for a desired TV station in memory.

1. Press the **[SC]** button.
2. When the desired station is found, press the **[SC]** button again to remain tuned to that station.

Note:

- Do not press and hold the **[SC]** button for 2 seconds or longer. Doing so will trigger the auto store function and start storing stations into memory.

Setting the TV area

When you select the TV area (TV reception area), the TV tuner area setting changes.

1. Press and hold the **[T]** button for 1 second or longer to switch to the adjustment selection display.
2. Press the **[◀◀]** or **[▶▶]** button to select "TV AREA".
3. Press the **[▶|||]** button.
4. Turn the **[ROTARY]** knob clockwise or counterclockwise to select the reception area.
5. Press the **[▶|||]** button.
6. Press the **[T]** button to return to the previous mode.

Setting the TV diver

You can change the reception setting for the TV antenna connected to the TV tuner.

1. Press and hold the **[T]** button for 1 second or longer to switch to the adjustment selection display.
2. Press the **[◀◀]** or **[▶▶]** button to select "TV DIVER".
3. Turn the **[ROTARY]** knob clockwise to set to "ON" or counterclockwise to set to "OF".

● ON:

Sets reception emphasizing the visual.

● OF:

Sets the diver setting to OFF.

4. Press the **[T]** button to return to the previous mode.

DSP Operations

DSP control function

If the DSP (DPH910), sold separately, is connected to this unit using the CeNET cable, all the functions of the DSP can be controlled.

DSF functions

There are 2 modes available in DPH910, STD mode and professional mode. Choose one of them and adjust the sound field and the sound quality.

* STD mode: Standard mode

● Functions common to each mode:

Auto loudness, etc.

● Standard mode:

Adjustment using the graphic equalizer function and the DSF function.

● Professional mode:

Adjustment using the VSE function and the parametric equalizer function.

* When the STD mode is selected, adjustment for the professional mode cannot be made. On the contrary, when the professional mode is selected, adjustment for the STD mode cannot be made.

* **For details on functions of each mode, refer to the owner's manual supplied with the DPH910.**

* Hereafter the graphic equalizer is referred to as a G.EQ, the space equalizer referred to as VSE and the parametric equalizer referred to as P.EQ.

Operations common to each mode

Output adjustment of auto loudness, subwoofer and playback band

1. Press and hold the [T] button for 1 second or longer to switch to the adjustment selection display.
2. Press the [◀] or [▶] button to select "SOUND".
3. Press the [▶||] button.
4. Press the [◀] or [▶] button to select the adjustment item.

There are "A. LD LEVEL", "WOOFER OUT", "WOOFER LPF", "HPF" and "TEST TONE" available for the adjustment items.

* For details on each adjustment item, refer to the owner's manual supplied with the DPH910.

5. Turn the [ROTARY] knob clockwise or counterclockwise to make the adjustment.

6. Pressing the [▶||] button returns to the adjustment selection display.
7. Press the [T] button to return to the previous mode.

Selecting the easy mode or the professional mode

* The factory default setting is "STD".

1. Press and hold the [T] button for 1 second or longer to switch to the adjustment selection display.
2. Press the [◀] or [▶] button to select "AC-PSEL".
3. Turn the [ROTARY] knob clockwise or counterclockwise to set the mode to "STD" or "PRO".
4. Press the [T] button to return to the previous mode.

Entering titles

You can give a title to the user memory of the DSF, G.EQ, VSE and P.EQ that you have adjusted yourself.

1. Press the [A] button to select the adjustment mode in which you want to give a title.
2. Press the [BND] button to select "USR". "USR" will be displayed in the function mode indication.
3. Press one of the [DIRECT] buttons to select the user memory to which you want to give a title.
4. Press the [T] button.
5. Press the [◀] or [▶] button to move the cursor.
6. Press the [D] button to select the character fonts.
There are capital letters, small letters, numbers, symbols and umlaut available for the character.
7. Turn the [ROTARY] knob clockwise or counterclockwise to select the character you want to input.
8. Repeat steps 5 to 7 to input the title.
9. Press and hold the [▶||] button for 2 seconds or longer to put the title into memory. The title input mode is cancelled.

STD mode/G.EQ operations

Note:

- The adjustment made in standard mode is not reflected in the adjustment in professional mode. On the contrary, the adjustment made in professional mode is not reflected in the adjustment in easy mode.

G.EQ effect ON/OFF

While the "G.EQ" indication is lit in the display, the G.EQ effect is set to "ON".

* The factory default setting is "ON".

1. Press the [A] button and select "G.EQ". While "G.EQ" is selected, "G.EQ" blinks in the display.
2. Press the [D] button. "G.EQ" in the display lit or unlit.
 - * When "G.EQ" is unlit, the G.EQ effect is set to OFF.

Note:

- If the G.EQ effect is set to OFF, the adjustment made in "G.EQ operations" is not reflected in the music source.

Selecting a G.EQ menu

1. Press the [A] button and select "G.EQ".
2. Press the [BND] button to select "BASC" (basc). "BASC" is displayed in the function mode indication.
3. Press one of the [DIRECT] buttons and select the desired G.EQ menu.
 - * To select the user memory, press the [BND] button to select "USR" and press one of the [DIRECT] buttons.

Editing/storing a G.EQ menu (User memory)

1. Select a G.EQ menu which you want to edit on the basis of.
2. Press and hold the [T] button for 1 second or longer.
3. Press the [◀] or [▶] button to select the frequency to be adjusted.

There are 50Hz, 100Hz, 200Hz, 400Hz, 1kHz, 3kHz and 12kHz available for the adjustment frequency.

 - * For details on each adjustment item, refer to the owner's manual supplied with the DPH910.

4. Turn the [ROTARY] knob clockwise or counterclockwise to make the adjustment. The adjustment range is from -6 to 6.
5. Repeat steps 3 to 4 to complete the adjustment and press the [T] button.
6. Press and hold one of the [DIRECT] buttons for 2 seconds or longer to store the edited contents.
 - * You can give a title to the user memory. For the inputting method of titles, refer to the subsection "Entering titles" in section "Operations common to each mode".

STD mode/DSF operations

DSF effect ON/OFF

When the "DSF" indication is lit in the display, the DSF effect is set to "ON".

* The factory default setting is "ON".

1. Press the [A] button and select "DSF".
2. Press the [D] button. "DSF" in the display lit or unlit.
 - * When "DSF" is unlit, the DSF effect is set to OFF.

Note:

- If the DSF effect is set to OFF, the adjustment made in "DSF operations" is not reflected in the music source.

Setting the listening position menu

1. Press the [A] button and select "DSF".
2. Press the [◀] or [▶] button to set the listening position type.

There are FULL SEAT, FRONT-R, FRONT-L, FRONT (only front seats), REAR (only rear seats) and PASS available for the listening position types.

 - * The factory default setting is "FULL SEAT".

Making fine adjustment of the listening position

1. Upon completion of setting the listening position, press the [▶] button.
2. Press the [◀] or [▶] button to select "BALANCE" or "FADER". The selected item blinks.
3. Turn the [ROTARY] knob clockwise or counterclockwise to adjust the balance and the fader.
4. Press the [▶] button to return to the DSF mode.

DSP Operations

Selecting a sound field menu

1. Press the **[A]** button and select **"DSF"**. **"DSF"** blinks in the display.
2. Press the **[BND]** button to select **"BSC1"** (basic-1) or **"BSC2"** (basic-2). **"BSC1"** or **"BSC2"** is displayed in the function mode indication in the display.
3. Press one of the **[DIRECT]** buttons and select the desired sound field menu.
 - * To select the user memory, press the **[BND]** button to select **"USR"** and press one of the **[DIRECT]** buttons.

Editing/storing a sound field menu (User memory)

1. Select a sound field menu which you want to edit on the basis of.
2. Press and hold the **[T]** button for 1 second or longer.
3. Press the **[◀]** or **[▶]** button to select the item to be adjusted.

There are **"EFFECT"**, **"DELAY"**, **"REAR MIX"**, **"REV.TIME"** or **"ROOM SIZE"** and **"HIGH"** or **"LIVENESS"** available for the items to be adjusted.

- * For details on each adjustment item, refer to the owner's manual supplied with the DPH910.
4. Turn the **[ROTARY]** knob clockwise or counterclockwise to make the adjustment.
 5. Repeat steps 3 to 4 to complete the adjustment and press the **[T]** button.
 6. Press and hold one of the **[DIRECT]** buttons for 2 seconds or longer to store the edited contents.
 - * You can give a title to the user memory. For the inputting method of titles, refer to the subsection **"Entering titles"** in section **"Operations common to each mode"**.

Professional mode/VSE operations

Note:

- * The adjustment made in professional mode is not reflected in the adjustment in standard mode. On the contrary, the adjustment made in standard mode is not reflected in the adjustment in professional mode.

VSE effect ON/OFF

While the **"VSE"** indication is lit in the display, the VSE effect is set to **"ON"**.

- * The factory default setting is **"ON"**.

1. Press the **[A]** button and select **"VSE"**.
2. Press the **[D]** button. **"VSE"** in the display lit or unlit.
 - * When **"VSE"** is unlit, the VSE effect is set to OFF.

Note:

- * If the VSE effect is set to OFF, the adjustment made in **"VSE operations"** is not reflected in the music source.

Selecting an VSE menu

1. Press the **[A]** button and select **"VSE"**.
2. Press the **[BND]** button to select **"BASC"** (basic). **"BASC"** is displayed in the function mode indication in the display.
3. Press one of the **[DIRECT]** buttons and select the desired VSE menu.
 - * To select the user memory, press the **[BND]** button to select **"USR"** and press one of the **[DIRECT]** buttons.

Editing/storing an VSE menu (User memory)

1. Select an VSE menu which you want to edit on the basis of.
2. Press and hold the **[T]** button for 1 second or longer.
3. Press the **[◀]** or **[▶]** button to select the item to be adjusted.

There are **"DIFFUSE"**, **"CAR WIDTH"** and **"CAR LENG"** available for the items to be adjusted.

- * For details on each adjustment item, refer to the owner's manual supplied with the DPH910.
4. Turn the **[ROTARY]** knob clockwise or counterclockwise to make the adjustment. The adjustment range is from 1 to 10 for each item.
 5. Repeat steps 3 to 4 to complete the adjustment and press the **[T]** button.
 6. Press and hold one of the **[DIRECT]** buttons for 2 seconds or longer to store the edited contents.
 - * You can give a title to the user memory. For the inputting method of titles, refer to the subsection **"Entering titles"** in section **"Operations common to each mode"**.

DSP Operations

Professional mode/P.EQ operations

P.EQ effect ON/OFF

While the "P.EQ" indication is lit in the display, the P.EQ effect is set to "ON".

* The factory default setting is "ON".

1. Press the [A] button and select "P.EQ".
2. Press the [D] button. "P.EQ" in the display is changed from blinking to lit or unlit.

* When "P.EQ" is unlit, the P.EQ effect is set to OFF.

Note:

• If the P.EQ effect is set to OFF, the adjustment made in "P.EQ operations" is not reflected in the music source.

Selecting a P.EQ menu

1. Press the [A] button and select "P.EQ". "P.EQ" blinks in the display.
 2. Press the [BND] button to select "BASC" (basic). "BASC" is displayed in the function mode indication in the display.
 3. Press one of the [DIRECT] buttons and select the desired P.EQ menu.
- * To select the user memory, press the [BND] button to select "USR" and press one of the [DIRECT] buttons.

Editing/storing a P.EQ menu (User memory)

1. Select a P.EQ menu which you want to edit on the basis of.
2. Press and hold the [T] button for 1 second or longer.
3. Press the [◀] or [▶] button to select the item to be adjusted.

There are correction channel, correction band, selection of the center frequency, gain adjustment and selection of the Q-curve available for the items to be adjusted.

* For details on each adjustment item, refer to the owner's manual supplied with the DPH910.

4. Turn the [ROTARY] knob clockwise or counterclockwise to make the adjustment.
5. Repeat steps 3 to 4 to complete the adjustment and press the [T] button.
6. Press and hold one of the [DIRECT] buttons for 2 seconds or longer to store the edited contents.

* You can give a title to the user memory. For the inputting method of titles, refer to the subsection "Entering titles" in section "Operations common to each mode".

Digital Radio / DAB Operations


DAB control function

When a CeNET cable is used to connect a DAB (DAH913 or DAH9500z) (sold separately), all functions can be operated.

* A Digital Radio (DAB) program can be received only in Canada.

Listening to the DAB station

1. Press the [FNC] button to select the DAB mode.
2. When the unit receives a DAB station, the display changes in the following order:
Frequency channel → service label

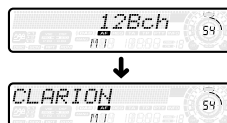

Switching displays

Press the [D] button for 1 second during the Main (service label) display to select Main (service label) or Sub (PTY).

Note:


• The display shown in the normal reception mode and the preset reception mode is the same when a DAB station is received.

3. When the unit does not receive a DAB station, the display changes in the following order:

–Normal reception mode–



–Preset reception mode–



Notes:

- The number of programmes and broadcasting times depend on the DAB stations.
- When the strength of DAB signals is weak, audio output is muted.

Seek tuning

1. Press the **[FNC]** button to select the DAB mode.
2. Press and hold the **[◀◀]** or **[▶▶]** button for 1 second or longer.



* "SEARCHING" appears in the display.

3. "DAB" lights up in the display when the main unit receives a DAB station.

* The main unit stops the seek tuning when it cannot find a DAB station. The display returns to the previous mode.

Manual tuning

1. Press the **[FNC]** button to select the DAB mode.
2. Press and hold the **[BND]** button for 1 second or longer. "MANU" lights up in the display.
3. Press the **[◀◀]** or **[▶▶]** button to select a station.

* If no operation is performed for more than 7 seconds, manual tuning is cancelled and the display returns to the previous mode.

Switching programmes

1. Press the **[FNC]** button to receive a DAB station.
2. Press the **[◀◀]** or **[▶▶]** button to switch programmes in the DAB station.

Note:

- The programme name may be the same depending on DAB programmes.

Programme scan

This function scans through each receivable programme in a DAB station being received for 10 seconds sequentially. This is useful when you want to search for a desired programme.

1. Press the **[FNC]** button to receive a DAB station.
2. Perform the following operation depending on the connected model.

Press the **[SC]** button. "SERVICE SCN" lights up and the unit starts scanning each programme for 10 seconds sequentially. Each time the main unit scans, the programme name is shown in the display.

3. To stop programme scan when a desired programme is tuned in.

Press the **[SC]** button.

Manual memory

The main unit has a manual memory function for DAB programmes. Up to 18 programmes (6 programmes each) can be preset in the preset buttons.

[M1], [M2] and [M3]

1. Press the **[FNC]** button to select DAB mode.
2. Press the **[BND]** button to select any one shown above.
3. Press the **[◀◀]** or **[▶▶]** button to select a desired programme.
4. Press and hold one of the **[DIRECT]** buttons (1 to 6) for 2 seconds or longer to store the programme.

Note:

- The interrupt programme (PTY or INFO) cannot be written into a manual memory.

Recalling a preset programme

1. Press the **[FNC]** button to select the DAB mode.
2. Press the **[BND]** button. Each time you press the **[BND]** button, the display changes in the following order:
[M1] → [M2] → [M3] → [M1]...
3. Press one of the **[DIRECT]** buttons to recall a preset programme.

Note:

- Press and hold the **[DIRECT]** button for 2 seconds or longer to store the programme currently being received. (Manual memory)

AF function

The AF function switches to a different frequency on the same network in order to maintain optimum reception.

* The factory default setting is "ON"

● Switching OFF the AF function

Press the **[RP]** button. "AF" in the display goes off and the AF function turns off.

● Switching ON the AF function

Press the **[RP]** button. "AF" in the display lights up and the AF function turns on.

* If the reception of the current broadcast station deteriorates, "SEARCHING SAME STATION" or "SEARCH" appears in the display and the radio searches for the same programme on another frequency.

INFO (Announcement)

In the INFO standby mode, when the selected announcement programme starts, the main unit switches to the selected announcement programme automatically.



● Setting the INFO standby mode

If you press and hold the [I] button for 1 second or longer, "INFO" lights in the display and the main unit is set into the INFO standby mode until the selected announcement is broadcast. When the selected announcement broadcast starts, the announcement item appears in the display. If you press and hold the [I] button for 1 second or longer while the selected announcement broadcast is being received, the selected announcement broadcast reception is cancelled and the main unit goes into the INFO standby mode.

● Cancelling INFO standby mode

To cancel the INFO standby mode, press and hold the [I] button for 1 second or longer.

● Information select

This is a function for selecting INFORMATION ON or OFF in the Information interrupt mode.

You can set ON up to 6 information items.

You can select any of the 6 items below:

INFORMATION item	
ENGLISH	Contents
Travel	Transport flash
Warning	Warning / Service
News	News flash
Weather	Area weather flash
Event	Event announcement
Special	Special event

1. Perform the following operation depending on the connected model.
Press and hold the [T] button for 1 second or longer.
2. Press the [◀] or [▶] button to select "INFO SEL", then press the [▶▶] button to enter "INFO SEL" mode.
3. Press the [◀] or [▶] button to select an information item. You can select any of 6 items:
Travel → Warning → News → Weather → Event → Special → Travel ...
4. Perform the following operation depending on the connected model.

Turn the [ROTARY] knob clockwise or counterclockwise to set the information item for ON or OFF.

5. Press the [T] button to return to the previous display.

Switching the PTY and INFO display language

You can select one of 2 languages (English or French) for the PTY and INFO shown in the display.

* The factory default setting is "ENGLISH".

1. Press and hold the [T] button for 1 second or longer to switch to the adjustment selection display.
2. Press the [◀] or [▶] button and select "LANGUAGE".
3. Press the [▶▶] button.
4. Turn the [ROTARY] knob clockwise or counterclockwise to select the desired language.
5. Press the [T] button to return to the previous mode.

TA (Traffic Announcement)

In the TA standby mode, when a traffic announcement broadcast starts, the traffic announcement broadcast is received as top priority regardless of the function mode. Traffic programme (TP) automatic tuning is also possible.

* This function can only be used when "TP" is lit in the display. When "TP" is lit, this means that the DAB broadcast station being received has traffic announcement programmes.

● Setting TA standby mode

If you press the [I] button when only "TP" is lit in the display, "TP" and "TA" light in the display and the unit is set into TA standby mode until a traffic announcement is broadcast. When a traffic announcement broadcast starts, "TRA INFO" appears in the display. If you press the [I] button while a traffic announcement broadcast is being received, the traffic announcement broadcast reception is cancelled and the unit goes into TA standby mode.

● Cancelling TA standby mode

With "TP" and "TA" lit in the display, press the [I] button. The "TA" in the display goes off and TA standby mode is cancelled.

* If "TP" is not lit, pressing [I] button searches for a TP station.

Digital Radio / DAB Operations

● Searching for a TP station

When "TP" is not lit, if you press the [I] button, "TA" in the display lights and the unit automatically receives a TP station.

Note:

- If a TP station is not received, the unit continues the search operation. Pressing the [I] button again goes off "TA" in the display and stops TP station searching.

PTY

This function enables you to listen to the selected programme type, irrespective of the function mode.

- * PTY broadcasts are not yet available in all countries.
- * In the INFO standby mode, INFO stations have priority over PTY stations.
- * In the TA standby mode, TP stations have priority over PTY stations.

PTY item	
ENGLISH	Contents
News	News
Inform	information
Sports	sports
Talk	talk
Rock	rock
CIs Rock	Classic Rock
Adlt Hit	Adult Hits
Soft Rck	Soft Rock
TOP 40	Top 40
Country	Country music
Oldies	Oldies
Soft	Soft music
Nostalgia	Nostalgia
Jazz	Jazz
Classicl	Classical
R & B	Rhythm and Blues
Soft R&B	Soft Rhythm and Blues
Language	language
Rel Musc	religious music
Rel Talk	religious talk
Persnlty	personality
Public	public
College	college
Weather	weather

● Setting PTY standby mode

When you press the [RD] button, "PTY" lights in the display and the PTY standby mode is turned on. When the selected PTY broadcast starts, the PTY item name appears in the display.

● Cancelling PTY standby mode

When you press and hold the [RD] button for 1 second or longer, "PTY" goes off in the display and PTY standby mode is cancelled.

● Cancelling a PTY interrupt broadcast

Press the [RD] button during the PTY interrupt broadcast, the PTY interrupt is cancelled and the unit returns to PTY standby mode.

Selecting PTY

1. When you press the [RD] button, the unit goes into PTY select mode.
2. Press any one of the [DIRECT] buttons. Alternatively, turn the [ROTARY] knob clockwise or counterclockwise to select the desired PTY.

* Below are the factory default settings stored for the [DIRECT] buttons.

Preset number	PTY item	
	ENGLISH	Contents
1	News	News
2	Sports	Sports
3	Country	Country music
4	Talk	Talk
5	Jazz	Jazz
6	Soft	Soft music

3. The PTY select mode is cancelled automatically 7 seconds after a PTY is selected.

PTY seek

1. When you press the [RD] button, the PTY select mode is turned on.
2. Select PTY.
3. Press the [◀◀] or [▶▶] button. If you press the [▶▶] button, the unit seeks a PTY broadcast moving up the frequencies; if you press the [◀◀] button, it seeks moving down the frequencies.

* If no station with the selected PTY broadcast can be received, the unit returns to PTY select mode.

PTY preset memory

1. When you press the **[RD]** button, the PTY select mode is turned on.
2. Turn the **[ROTARY]** knob clockwise or counterclockwise to select the desired PTY.
The 24 types of PTY below can be selected.
3. If you press and hold any one of the **[DIRECT]** buttons for 2 seconds or longer, the selected PTY is stored into that preset channel memory.

Emergency broadcast

When an emergency broadcast is received, all the function mode operations are stopped. "ALARM" appears in the display and the emergency broadcast can be heard.

● Cancelling an emergency broadcast

If you press **[RP]** button, emergency broadcast reception is cancelled.

Volume setting of TA, INFO, emergency broadcast (ALARM) and PTY

The volume for TA, INFO, ALARM and PTY interrupts can be set during TA, INFO, ALARM and PTY interrupt. Perform the following operation depending on the connected model.

* The factory default setting is "15".

During a TA, INFO, ALARM or PTY interrupt, turn the **[ROTARY]** knob clockwise or counterclockwise to set the volume to a desired level (0 to 33).

* When the TA, INFO, ALARM or PTY interrupt ends, the volume returns to the level it had before the interrupt.

Operation**● Play/Still operation**

Press the **[▶|||]** button to select the desired mode (play, still (pause)).

Each time the button is pressed, the mode changes cyclically.

● Chapter up/down operation (FF/FB operation)

Press the **[▶▶]** button for 1 second or shorter to increment chapters.


Hold down the **[▶▶]** button for 1 second or longer to fast forward.

Press the **[◀◀]** button for 1 second or shorter to decrement chapters.

Hold down the **[◀◀]** button for 1 second or longer to fast backward.

9. IN CASE OF DIFFICULTY

	Problem	Cause	Measure
General	Power does not turn on. (No sound is produced.)	Fuse is blown.	Replace with a fuse of the same amperage. If the fuse blows again, consult your store of purchase.
		Incorrect wiring.	Consult your store of purchase.
	No sound output when operating the unit with amplifiers or power antenna attached.	Power antenna lead is shorted to ground or excessive current is required for remote-on the amplifiers or power antenna.	1. Turn the unit off. 2. Remove all wires attached to the power antenna lead. Check each wire for a possible short to ground using an ohm meter. 3. Turn the unit back on. 4. Reconnect each amplifier remote wire to the power antenna lead one by one. If the amplifiers turn off before all wires are attached, use an external relay to provide remote-on voltage (excessive current required).
	Nothing happens when buttons are pressed.	The microprocessor has malfunctioned due to noise, etc.	Turn off the power, then press the [RELEASE] button and remove the DCP. Press the reset button with a thin rod.
	Display is not accurate.		
		DCP or main unit connectors are dirty.	Wipe the dirt off with a soft cloth moistened with cleaning alcohol.
CD	Compact disc cannot be loaded.	Another compact disc is already loaded.	Eject the compact disc before loading the new one.
	Sound skips or is noisy.	Compact disc is dirty.	Clean the compact disc with a soft cloth.
		Compact disc is heavily scratched or warped.	Replace with a compact disc with no scratches.
	Sound is bad directly after power is turned on.	Water droplets may form on the internal lens when the car is parked in a humid place.	Let dry for about 1 hour with the power on.
DSP	Poor sound quality	The equalizer levels are too high.	If the equalizer levels are too high, the sound may distort. Lower the equalizer levels.

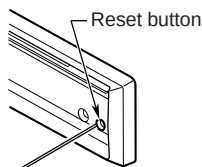

10. ERROR DISPLAYS

If an error occurs, one of the following displays is displayed.

Take the measures described below to eliminate the problem.

	Error Display	Cause	Measure
CD	ERROR 2	A CD is caught inside the CD deck and is not ejected.	This is a failure of CD deck's mechanism and consult your store of purchase.
	ERROR 3	A CD cannot be played due to scratches, etc.	Replace with a non-scratched, non-warped-disc.
	ERROR 6	A CD is loaded upside-down inside the CD deck and does not play.	Eject the disc then reload it properly.
CD changer	ERROR 2	A CD inside the CD changer is not loaded.	This is a failure of CD changer's mechanism and consult your store of purchase.
	ERROR 3	A CD inside the CD changer cannot be played due to scratches, etc.	Replace with a non-scratched, non-warped disc.
	ERROR 6	A CD inside the CD changer cannot be played because it is loaded upside-down.	Eject the disc then reload it properly.
MD changer	ERROR H	Displayed when the temperature in the MD changer is too high and playback has been stopped automatically.	Lower the surrounding temperature and wait for a while to cool off MD changer.
	ERROR 2	An MD inside the MD changer is not loaded.	This is a failure of MD changer's mechanism and consult your store of purchase.
	ERROR 3	An MD inside the MD changer cannot be played due to scratches, etc.	Replace with a non-scratched, non-warped disc.
	ERROR 6	An MD inside the MD changer cannot be played because it is loaded upside-down.	Eject the disc then reload it properly.
		Displayed when a non-recorded MD is loaded in the MD changer.	Load a pre-recorded MD in the MD changer.

If an error display other than the ones described above appears, press the reset button. If the problem persists, turn off the power and consult your store of purchase.

11. SPECIFICATIONS

FM Tuner

Frequency Range:
87.9 MHz to 107.9 MHz

Usable Sensitivity:
9 dBf

50dB Quieting Sensitivity:
15 dBf

Alternate Channel Selectivity:
70 dB

Stereo Separation (1 kHz):
35 dB

Frequency Response (± 3 dB):
30 Hz to 15 kHz

AM Tuner

Frequency Range:
530 kHz to 1710 kHz

Usable Sensitivity:
25 μ V

CD Player

System:
Compact disc digital audio system

Usable Discs:
Compact disc

Frequency Response (± 1 dB):
5 Hz to 20 kHz

Signal to Noise Ratio (1 kHz):
100 dB

Dynamic Range (1 kHz):
95 dB

Harmonic Distortion:
0.01%

Audio

Maximum Power Output:
200 W (50 W $\times$ 4 ch)

Continuous Average Power Output:
18 W $\times$ 4, into 4 Ω , 20 Hz to 20 kHz, 1%THD

Base Control Action (30 Hz):
 ± 15 dB/-12dB

MID Control Action (1kHz):
 ± 12 dB

Treble Control Action (10 kHz):
 ± 12 dB

Line Output Level (CD 1 kHz):
4 V

General

Power Supply Voltage:
14.4 V DC (10.8 to 15.6 V allowable), negative ground

Current Consumption:
Less than 15 A

Speaker Impedance:
4 Ω (4 Ω to 8 Ω allowable)

Weight / Source unit:
3.53 lb. (1.6 kg)

Weight / Remote control unit:
1 oz. (30 g) (including battery)

Dimensions / Source unit:
7" (Width) $\times$ 2" (Height) $\times$ 6-1/8" (Depth)
[178 (W) $\times$ 50 (H) $\times$ 155 (D) mm]

Dimensions / Remote control unit:
1-3/4" (Width) $\times$ 4-5/16" (Height) $\times$ 1-1/8" (Depth)
[44 (W) $\times$ 110 (H) $\times$ 27 (D) mm]

Notes:

- Specifications and design are subject to change without notice for further improvement.

Clarion Co., Ltd.

All Rights Reserved. Copyright © 2002: Clarion Co., Ltd.
Printed in China / Imprimé en Chine / Impreso en China

clarion

Installation/Wire Connection Guide Manuel d'installation et de connexion Guía de instalación/conexión de cables


English Français Español

1. BEFORE STARTING / PRÉPARATIFS / ANTES DE COMENZAR

1. This set is exclusively for use in cars with a negative ground, 12 V power supply.
2. Read these instructions carefully.
3. Be sure to disconnect the battery "(-)" terminal before starting. This is to prevent short circuits during installation. (Figure 1)

1. Cet appareil est exclusivement destiné à être utilisé dans les voitures avec une alimentation 12 V à masse négative.
2. Lire ces instructions attentivement.
3. S'assurer de débrancher la borne "(-)" de la batterie avant de commencer. Cela évitera les court-circuits pendant l'installation. (Figure 1)

1. Esta unidad ha sido diseñada para utilizarse exclusivamente en automóviles con fuente de alimentación de 12 V. y negativo a masa.
2. Lea cuidadosamente estas instrucciones.
3. Antes de comenzar, cerciórese de desconectar el terminal "(-)" de la batería. Esto es para evitar cortocircuitos durante la instalación (Figura 1)

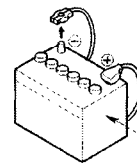

Car battery
Batterie de voiture
Batería del automóvil

Figure 1 / Figure 1 / Figura 1

English Français Español

2. CAUTIONS ON INSTALLATION / PRÉCAUTIONS AU SUJET DE L'INSTALLATION / PRECAUCIONES PARA LA INSTALACIÓN

1. Prepare all articles necessary for installing the source unit before starting.
2. Install the unit within 30° of the horizontal plane. (Figure 2)
3. If you have to do any work on the car body, such as drilling holes, consult your car dealer beforehand.
4. Use the enclosed screws for installation. Using other screws can cause damage. (Figure 3)

1. Avant de commencer, préparer toutes les pièces nécessaires pour installer l'appareil pilote.
2. Installer l'appareil avec un angle inférieur à 30° par rapport à l'horizontal (Figure 2)
3. S'il est nécessaire d'effectuer certains travaux sur la carrosserie comme percer des trous, consulter d'abord votre concessionnaire automobile.
4. Utiliser les vis fournies pour l'installation. L'utilisation d'autres vis peut causer des dommages. (Figure 3)

1. Antes de comenzar, prepare todos los elementos necesarios para instalar la unidad fuente.
2. Instale la unidad con un ángulo de 30° sobre el plano horizontal. (Figura 2)
3. Si tiene que realizar cualquier trabajo en la carrocería, como taladrado de orificios, etc., consulte al proveedor de su automóvil.
4. Utilice los tornillos suministrados para la instalación. La utilización de otros tornillos podría resultar en daños. (Figura 3)

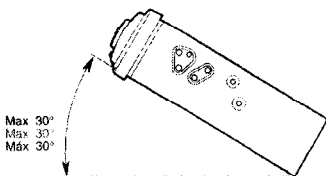


Figure 2 / Figure 2 / Figura 2


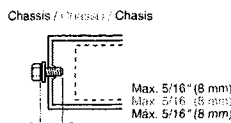


Figure 3 / Figure 3 / Figura 3



English Français Español

3. INSTALLING THE SOURCE UNIT / INSTALLATION DE L'APPAREIL PILOTE / INSTALACIÓN DE LA UNIDAD FUENTE

■ Universal Mount

1. Place the universal mounting bracket into the instrument panel, use a screwdriver to bend each stopper of the universal mounting bracket inward, then secure the stopper as shown in Figure 4.
2. Wire as shown in Section 6.
3. Insert the source unit into the universal mounting bracket until it locks.
4. Take care of the top and bottom of the outer escutcheon and mount it so that all the hooks are locked. (Figure 5)

■ Montage universel

1. Placez le support de montage universel dans le tableau de bord, utilisez un tournevis pour plier vers l'intérieur chaque languette du support de montage universel, puis fixez les languettes comme montré sur la Figure 4.
2. Câbler comme montré dans la Section 6.
3. Insérez l'appareil pilote dans le support de montage universel jusqu'à ce qu'il soit bloqué.
4. Repérez le haut et le bas de l'écusson extérieur et le montez de manière que tous les crochets soient verrouillés. (Figure 5)

■ Montaje universal

1. Coloque el soporte de montaje universal en el tablero de instrumentos, utilice un destornillador para doblar cada retén del soporte de montaje universal hacia adentro, y después asegure el retén como se muestra en la Figura 4.
2. Conecte los cables como se muestra en la Sección 6.
3. Inserte la unidad fuente en el soporte de montaje universal hasta que quede enganchado.
4. Tenga cuidado con la partes superior e inferior de la pieza ornamental exterior, y móntela de forma que todos los ganchos queden bloqueados (Figura 5)

Notes:

- 1) Some car models require special mounting kits for proper installation. Consult your Clarion dealer for details.
- 2) Fasten the front stopper securely to prevent the source unit from coming loose.



Remarques:

- 1) Certains modèles de voiture nécessitent un kit de montage spécial pour une installation correcte. Consultez le revendeur Clarion pour les détails.
- 2) Serrer fermement la languette avant pour éviter que l'appareil pilote ne se desserre.

Notas:


- 1) Algunos modelos de automóviles requieren juegos de montaje especiales para realizar la instalación apropiada. Solicite los detalles a su proveedor Clarion.
- 2) Apriete con seguridad el retén frontal para evitar que se afloje la unidad fuente.

- Console opening dimensions
- Dimensions d'ouverture de la console
- Dimensiones de la abertura de la consola

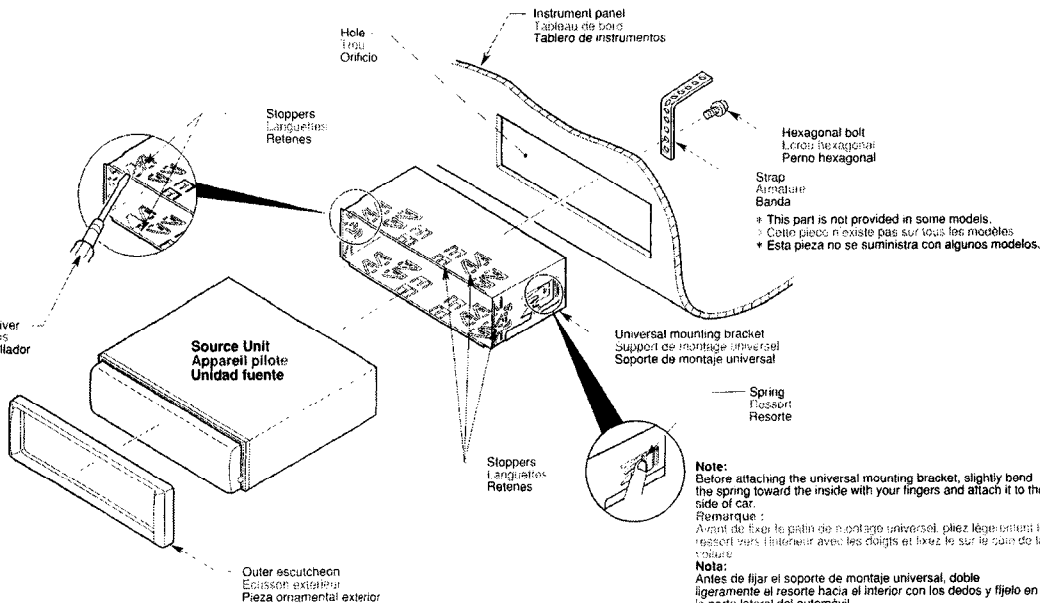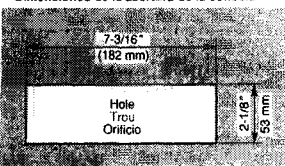

- Note:
- Before attaching the universal mounting bracket, slightly bend the spring toward the inside with your fingers and attach it to the side of car.
- Remarque:
- Avant de fixer le support de montage universel, pliez légèrement le ressort vers l'intérieur avec les doigts et fixez-le sur le côté de la voiture.
- Nota:
- Antes de fijar el soporte de montaje universal, doble ligeramente el resorte hacia el interior con los dedos y fíjelo en la parte lateral del automóvil.

Figure 4 / Figure 4 / Figura 4

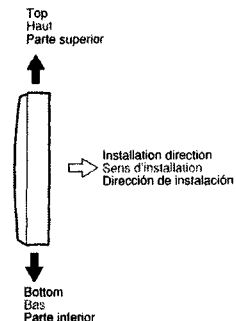

Outer escutcheon side view
Vue latérale de l'écusson extérieur
Vista lateral de la pieza ornamental exterior

Figure 5 / Figure 5 / Figura 5

■ Fixed Mount (TOYOTA, NISSAN and other ISO/DIN equipped vehicles)

This unit is designed for fixed installation in the dashboard.
If the vehicle is equipped with a factory-installed radio, install the source unit with the parts and screws marked (*). (Figure 6)
If the vehicle is not equipped with a factory-installed radio, obtain an installation kit to install the source unit in the following procedure.

1. Secure the mounting brackets to the chassis as shown in Figure 6. Holes are pre-tapped for TOYOTA and NISSAN vehicles; modification, such as drilling new holes, of the mounting brackets may be required for other models.
2. Wire as shown in Section 6.
3. Secure the unit in the dashboard, and then reassemble the dashboard and the center panel.

- * The parts and screws with this mark are used to install radio or included in the installation kit
- * The screws with this mark are originally attached to the vehicle
- * Les pièces et les vis portant cette marque sont utilisées pour l'installation ou fournies dans le kit d'installation
- * Les vis portant cette marque sont fournies d'origine avec le véhicule
- * Las piezas y tornillos con esta marca se utilizan para instalar la radio o se suministran con el juego de instalación.
- * Los tornillos con esta marca están originalmente fijados a los automóviles

■ Montage fixe (TOYOTA, NISSAN et autres véhicules équipés ISO/DIN)


Cet appareil est conçu pour une installation fixe dans le tableau de bord. Si le véhicule est équipé d'un auto radio installé à l'usine, installer l'appareil pilote avec les pièces et les vis marquées de (*). (Figure 6)
Si le véhicule n'est pas équipé d'un auto-radio installé à l'usine se procurer un kit d'installation pour installer l'appareil pilote avec la procédure suivante.

1. Fixer le support de montage sur le châssis comme montré sur la Figure 6. Les trous sont pré-perçus pour les véhicules TOYOTA et NISSAN; des modifications du support de montage, comme le perçage de nouveaux trous, peuvent être nécessaires pour les autres modèles.
2. Câbler comme montré dans la Section 6
3. Fixer l'appareil dans le tableau de bord puis remonter le tableau de bord et le panneau central

■ Montaje fijo (Automóviles TOYOTA, NISSAN, y otros provistos de normas ISO/DIN)

Esta unidad ha sido diseñada para instalarse de forma fija en el tablero de instrumentos. Si el automóvil dispone de una radio instalada en fábrica, instale la unidad fuente con las piezas y los tornillos marcados con (*). (Figura 6)
Si el automóvil no dispone de una radio instalada en fábrica, adquiere un juego de instalación para instalar la unidad fuente de acuerdo con el procedimiento siguiente.

1. Asegure los soportes de montaje al chasis como se muestra en la Figura 6. Los orificios ya han sido taladrados en los automóviles TOYOTA y NISSAN, pero para otros modelos puede resultar necesario realizar modificaciones, como taladrado de nuevos orificios en los soportes de montaje.
2. Conecte los cables como se muestra en la Sección 6.
3. Asegure la unidad al tablero de instrumentos, y después vuelva a montar el tablero de instrumentos y el panel central.

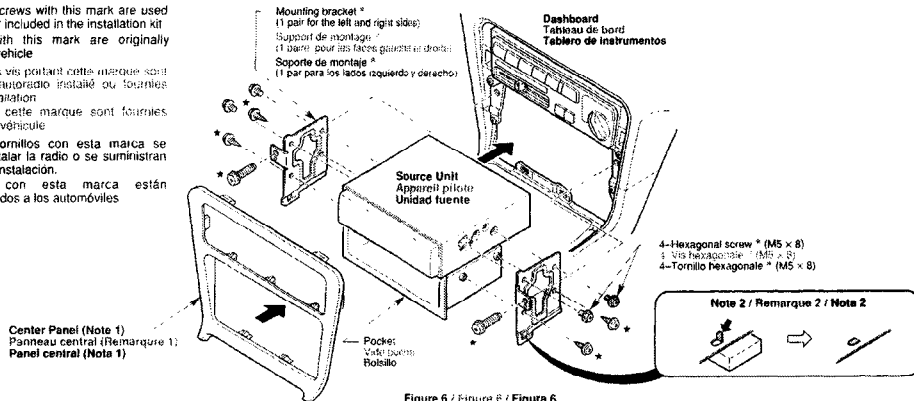

Note 1: In some cases, the center panel may require some modification (trimming, filling, etc.).

Note 2: If a hook on the installation bracket interferes with the unit, bend and flatten it with a nipper or a similar tool.

Remarque 1: Dans certains cas, le panneau central peut nécessiter certaines modifications (ébarbage, remplissage, etc.).

Remarque 2: Si un crochet du support d'installation interfère avec l'appareil, le tordre et l'aplatir avec une pince ou un outil similaire.

Note 1: En algunos casos, el panel central puede requerir ciertas modificaciones (recorte, limado, etc.).

Note 2: Si algún gancho del soporte de montaje interfiere con la unidad, dóblelo y aplánelo con unos alicates u otra herramienta similar.



English Français Español

4. REMOVAL OF THE SOURCE UNIT / DEPOSE DE L'APPAREIL PILOTE / DESMONTAJE DE LA UNIDAD FUENTE

1. When removing the source unit, disassemble it in the reverse of the order in Section "3. INSTALLING THE SOURCE UNIT".
2. Press the outer escutcheon upward and remove it. (Figure 7)
3. Insert and lock the hook plates. (Figure 8)
4. Pull the hook plates to remove the source unit.

1. Lors de la dépose de l'appareil pilote, démontez dans l'ordre inverse de la Section "3. INSTALLATION DE L'APPAREIL PILOTE".
2. Poussez l'écusson extérieur vers le haut et le retirez. (Figure 7)
3. Insérer et verrouiller les plaques à crochet. (Figure 8)
4. Tirer sur les plaques à crochet pour retirer l'appareil pilote.

1. Para desmontar la unidad fuente, realice el procedimiento inverso al de la Sección "3. INSTALACIÓN DE LA UNIDAD FUENTE".
2. Presione la pieza ornamental exterior hacia afuera y extraíga-la. (Figura 7)
3. Inserte y bloquee las placas de enganche. (Figura 8)
4. Tire de las placas de enganche para extraer la unidad fuente.

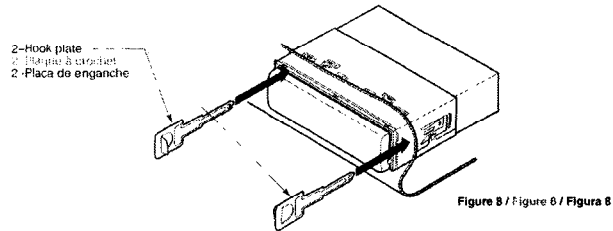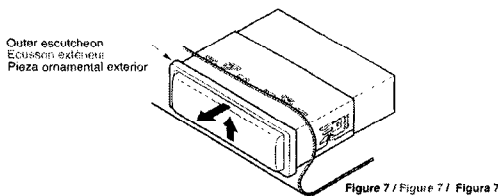


English Français Español

5. CAUTIONS ON WIRING / PRÉCAUTIONS AU SUJET DES CONNEXIONS / PRECAUCIONES PARA LA CONEXIÓN DE CABLES

1. Be sure to turn the power off when wiring.
2. Be particularly careful where you route the wires. Keep them well away from the engine, exhaust pipe, etc. Heat may damage the wires.
3. If the fuse should blow, check that the wiring is correct. If it is, replace the fuse with a new one with the same amperage rating as the original one.
4. To replace the fuse, open the lock on the source unit side, remove the old fuse and insert the new one. (Figure 9)
* There are various types of fuse cases. Do not let the battery side terminal touch other metal parts.
5. Connect the CeNET extension cable fully and securely until it locks. When the CeNET extension cable is pulled, hold the side cap part and pull it towards you.
* When the CeNET extension cable is extended or branches, use extension cable CCA-520 (6 feet [2.5m]) or CCA-521 (2 feet [0.6m]), or Y-adaptor CCA-519 (each of them is sold separately).
* Use the CeNET extension cable made by Clarion.


1. S'assurer de mettre l'appareil hors circuit avant de faire le câblage.
2. Faire particulièrement attention lors de l'acheminement des fils. Les éloigner du moteur, des tuyaux d'échappement, etc. La chaleur risque d'endommager ces fils.
3. Si le fusible saute, vérifier si le câblage est correct. Si le fusible est grillé, le remplacer par un fusible neuf de même ampérage que le fusible d'origine.
4. Pour remplacer le fusible, ouvrir le boîtier sur le côté de l'appareil pilote, retirer l'ancien fusible et insérer le fusible neuf. (Figure 9)
* Il existe plusieurs types de boîtiers à fusibles. Ne pas laisser la borne de batterie entrer en contact avec les autres pièces métalliques.
5. Connecter le câble d'extension CeNET complètement et solidement jusqu'à ce qu'il soit verrouillé. Pour tirer le câble d'extension CeNET, tenir la partie coquilleuse du capuchon et tirer vers vous.
* Pour étendre ou dériver le câble d'extension CeNET, utiliser le câble d'extension CCA-520 (2,5 m, 18 pieds) ou CCA-521 (0,6 m, 2 pieds), ou le adaptateur Y CCA-519 (ces câbles sont vendus séparément).
* Utilisez les câbles d'extension CeNET fabriqués par Clarion.

1. Antes de hacer las conexiones, asegúrese de desconectar la alimentación de la unidad.
2. Sea especialmente cuidadoso al dirigir y fijar los cables. Manténgalos alejados del motor, tubo de escape, etc. El calor puede dañar los cables.
3. Si el fusible se quema, revise las conexiones. Si está quemado, reemplace el fusible por otro nuevo con el mismo valor de amperaje que el original.
4. Para reemplazar el fusible, abra la tapa de la unidad fuente, retire el fusible antiguo e instale otro nuevo. (Figura 9)
* Existen distintos tipos de cajas de fusibles, no permita que el terminal del lado de la batería quede en contacto con otras partes metálicas.
5. Conecte el cable prolongador CeNET completa y seguramente hasta que chasquee. Para desconectar el cable, sujete la parte de la tapa deslizable y tire hacia usted.
* Para prolongar o ramificar el cable prolongador CeNET, utilice un cable prolongador CCA-520 (2,5 m) o CCA-521 (0,6 m), o un adaptador en Y CCA-519 (vendidos aparte).
* Utilice un cable prolongador CeNET fabricado por Clarion.

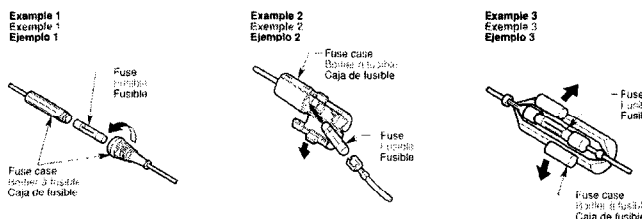


6. WIRE CONNECTIONS / CONNECTIQUE / CONEXIÓN DE CABLES

Note: Some units do not have connecting leads or jacks. (Refer to ★.)
Remarque: Certains appareils n'ont pas de conducteurs de connexion ou de prises. (Voir ★.)
Nota: Algunas unidades no tienen cables de conexión ni conectores. (Refiérase a ★.)

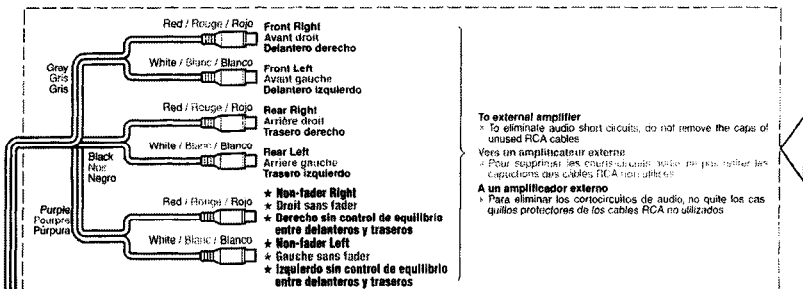


Rear Layout Disposition arrière Disposición de la parte posterior

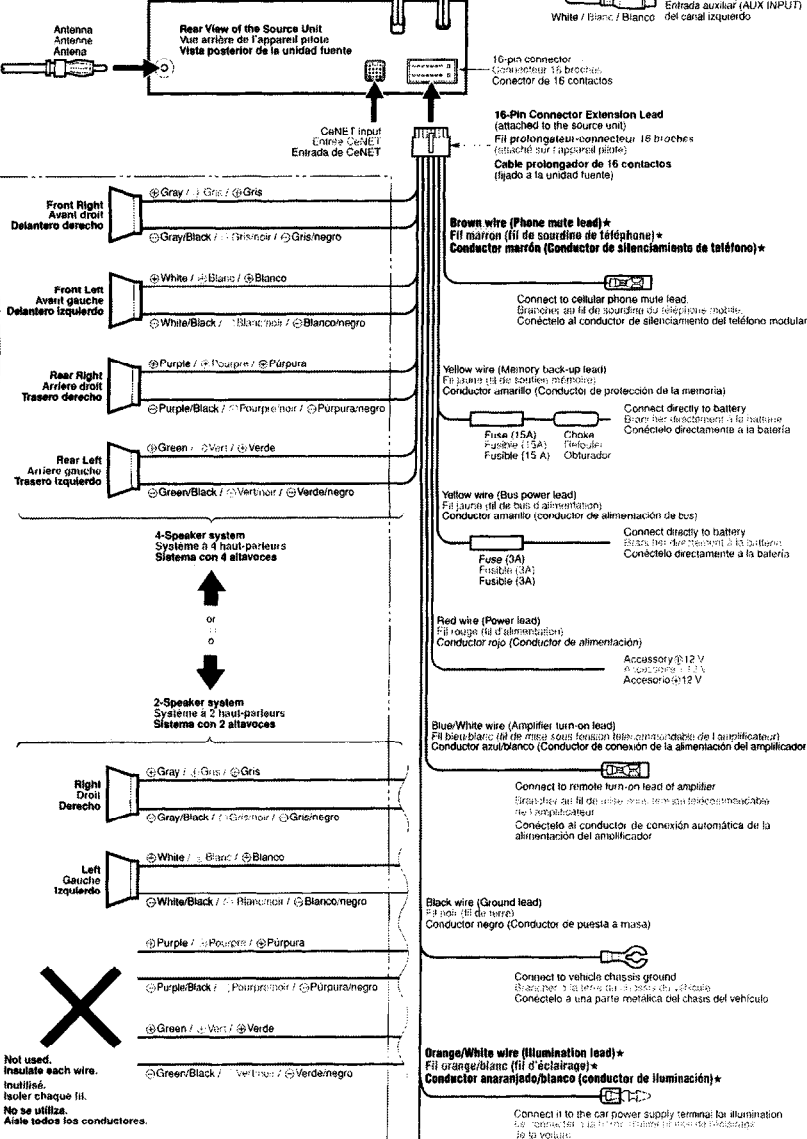


Not used.
 Insulate each wire.
 Isolés chaque fil.
 No se utiliza.
 Aísla todos los conductores.

- Be sure to read this when connecting using the RCA terminals.
- Lire attentivement cette section lors du raccordement utilisant les bornes RCA.
- Asegúrese de leer esta nota al conectar los terminales RCA.

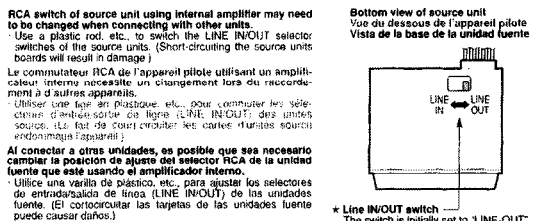


RCA connection using LINE-OUT Connexion RCA utilisant la sortie de ligne (LINE-OUT) Conexión RCA utilizando LINE-OUT

- When using external amplifier
- Lors de l'utilisation d'un amplificateur externe
- Cuando utilice un amplificador externo

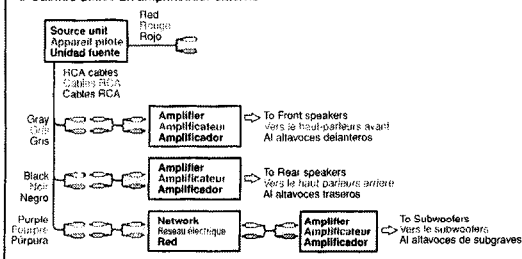


- When using expanded DSP/EQ module with external amplifier
- Lors de l'utilisation d'un module DSP/EQ avec un amplificateur externe
- Cuando utilice un módulo DSP/EQ expandido con el amplificador interno

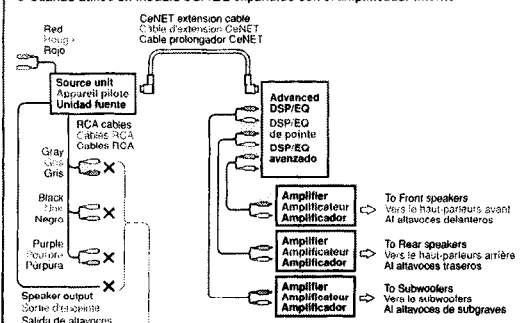

When the source unit is connected to the expanded DSP/EQ, a sound signal is not generated from both RCA pin cables of the source unit and speaker output.
 Quand l'appareil source est connecté au module DSP/EQ, aucun signal sonore n'est généré des deux câbles RCA de l'appareil source et de la sortie des haut-parleurs.
 Cuando la unidad fuente esté conectada a DSP/EQ, no habrá salida de señal de sonido a través de los cables clavija RCA de la unidad fuente ni de la salida de altavoces.

RCA connection using LINE-IN Connexion RCA utilisant la borne d'entrée de ligne (LINE-IN) Conexión RCA utilizando LINE-IN


- Using internal amplifier connected to expanded DSP/EQ module
- Utilisation de l'amplificateur interne connecté au module DSP/EQ
- Utilización del amplificador interno conectado al módulo DSP/EQ expandido

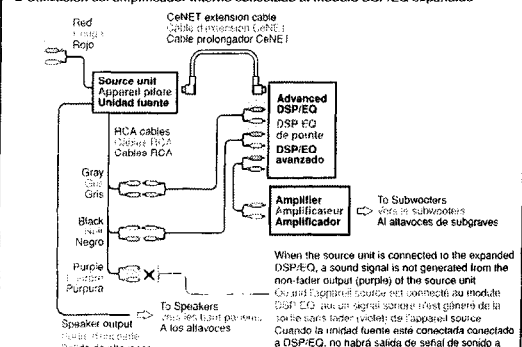


When the source unit is connected to the expanded DSP/EQ, a sound signal is not generated from the non-fader output (purple) of the source unit.
 Quand l'appareil source est connecté au module DSP/EQ, aucun signal sonore n'est généré de la sortie sans fader (violet) de l'appareil source.
 Cuando la unidad fuente esté conectada a DSP/EQ, no habrá salida de señal de sonido a través de la salida sin equilibrio entre los altavoces delanteros y traseros (púrpura) de la unidad fuente.

7. SAMPLE SYSTEMS / EXEMPLES DE SYSTÈMES / EJEMPLOS DE SISTEMAS


- Example of the system using an internal amplifier. (AUDIO)
- Exemple de système utilisant un amplificateur interne. (AUDIO)
- Ejemplo de sistema utilizando un amplificador interno. (AUDIO)

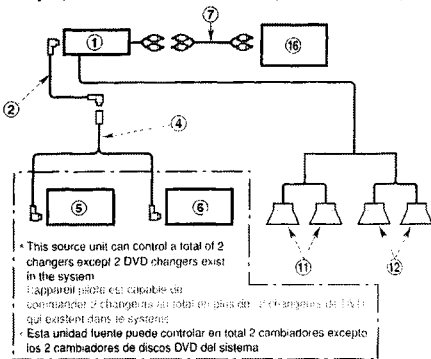

- Example of the system using an external amplifier. (AUDIO, VISUAL)
- Exemple de système utilisant un amplificateur extérieur. (AUDIO, VISUEL)
- Ejemplo de sistema utilizando un amplificador externo. (AUDIO, VIDEO)

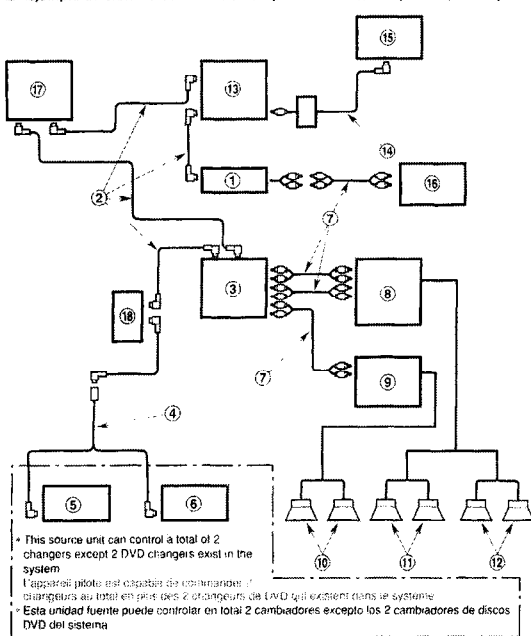

- Example of the system using an external amplifier. (AUDIO)
- Exemple de système utilisant un amplificateur extérieur. (AUDIO)
- Ejemplo de sistema utilizando un amplificador externo. (AUDIO)

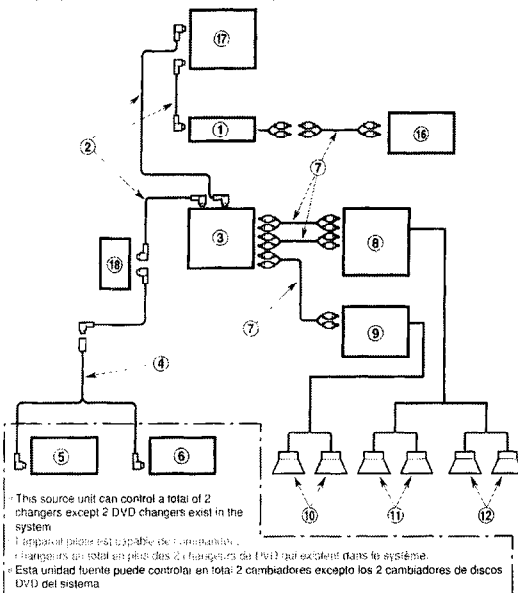

Note:
Use a CeNET extension cable that is less than 20 m in length (including the Y-adaptor CCA-519.)
Remarque:
Utiliser un câble d'extension CeNET inférieur à 20 m de long (en comptant aussi le adaptateur Y CCA-519.)
Nota:
Utilice un cable CeNET de menos de 20 m de longitud (incluyendo el adaptador en Y CCA-519.)

- + Some source units cannot control the expanded DSP/EQ module or expanded TV tuner module. Read the owner's manual about whether the unit can control them.
- + Certains appareils source ne peuvent pas commander le module DSP/EQ ou le module tuner de télévision. Consulter le mode d'emploi pour savoir si l'appareil peut le commander.
- + Algunas unidades fuente no podrán controlar el módulo DSP/EQ ni el módulo sintonizador de televisión. Con respecto a si la unidad puede controlarlo o no, lea el manual de instrucciones.

English

1	Source Unit
2	CeNET extension cable
3	Advanced DSP/EQ Module
4	Y-adaptor (sold separately)
5	CD or MD or DVD changer
6	CD or MD or (DVD) changer
7	RCA Extension Cable (sold separately)
8	4-Channel Power Amplifier
9	2-Channel Power Amplifier
10	Subwoofers
11	Front Speakers
12	Rear Speakers
13	Expanded TV Tuner Module
14	Monitor/Tuner Connection Cable
15	Video Monitor
16	External Unit
17	Expanded DAB tuner module
18	SIRIUS satellite radio receiver

Français

1	Appareil pilote
2	Câble d'extension CeNET
3	Module DSP/EQ de pointe
4	Y adaptateur (vendu séparément)
5	Changeur de CD ou de MD ou de DVD
6	Changeur de CD ou de MD ou de (DVD)
7	Câble prolongateur RCA (vendu séparément)
8	Amplificateur de puissance 4 canaux
9	Amplificateur de puissance 2 canaux
10	Subwoofers
11	Haut parleurs avant
12	Haut parleurs arrière
13	Module tuner TV
14	Câble de connexion de monitor/sintonisateur
15	Moniteur vidéo
16	Appareil externe
17	Module de tuner DAB étendu
18	Récepteur radio satellite SIRIUS

Español

1	Unidad fuente
2	Cable prolongador CeNET
3	Módulo DSP/EQ avanzado
4	Adaptador en Y (vendido aparte)
5	Cambiador de discos CD, MD, o DVD
6	Cambiador de discos CD o MD (o DVD)
7	Cable prolongador RCA (vendidos aparte)
8	Amplificador de potencia de 4 canales
9	Amplificador de potencia de 2 canales
10	Altavoces de subgraves
11	Altavoces delanteros
12	Altavoces traseros
13	Módulo sintonizador de televisión expandido
14	Cable de conexión de monitor/sintonizador
15	Monitor de video
16	Unidad externa
17	Módulo sintonizador DAB ampliado
18	Sintonizador SIRIUS de recepción radio vía satélite

English Français Español

8. GENERAL CAUTIONS / PRÉCAUTIONS GÉNÉRALES / PRECAUCIONES GENERALES

- Do not open the case. There are no user serviceable parts inside. If you drop anything into the unit during installation, consult your dealer or an authorized CLARION service center.
- Use a soft, dry cloth to clean the case. Never use hard cloth, thinner, benzene, alcohol, etc. For tough dirt, apply a little cold or warm water to a soft cloth and wipe off the dirt gently.

IMPORTANT:
Improper installation may cause damage to your unit or car. If you do not have the appropriate experience, consult a qualified installer. Cutting chassis wire leads voids the warranty.

- Ne pas ouvrir le coffret. Il n'y a pas de pièces réparables par l'utilisateur à l'intérieur de l'appareil. Si un objet est tombé dans l'appareil pendant l'installation, consultez votre revendeur ou un service après-vente autorisé CLARION.
- Utiliser un chiffon doux et sec pour nettoyer le coffret. Ne jamais utiliser un chiffon rugueux, du benzène, de l'alcool, etc. Pour enlever la saleté tenace, appliquer un peu d'eau froide ou tiède sur un chiffon doux et essuyer doucement la saleté.

IMPORTANT:
Une installation inappropriée peut endommager l'appareil ou le véhicule. Si l'utilisateur n'a pas les connaissances nécessaires, consulter un installateur qualifié. Couper le fil des conducteurs de montage annule la garantie.

- No abra la caja. En el interior no hay piezas que pueda reparar el usuario. Si dentro de la unidad entra algo durante la instalación, consulte a su proveedor o a un centro de servicio autorizado por CLARION.
- Para limpiar la caja, utilice un paño suave y seco, no use nunca un paño duro, diluidor de pintura, benceno, alcohol, etc. Para la suciedad resistente, aplique un poco de agua fría o caliente a un paño suave y frote suavemente la parte sucia.

IMPORTANT:
La instalación inapropiada puede causar daños en su unidad o su automóvil. Si usted no posee la experiencia apropiada, consulte a un instalador cualificado. El corte de los conductores de puesta a masa (carrocería) anulará la garantía.

11 Which of the following products/services do you own or intend to buy within the next 18 months?

Own	Intend to buy	Own	Intend to buy
Home Desktop PC 1 ☐	9 ☐	Satellite System/Service 17 ☐	24 ☐
Laptop Computer 2 ☐	10 ☐	Cellular Telephone 18 ☐	25 ☐
Color Monitor 3 ☐	11 ☐	Pager 19 ☐	26 ☐
CD-ROM 4 ☐	12 ☐	Call Waiting 20 ☐	27 ☐
Computer Speakers 5 ☐	13 ☐	Karaoke 21 ☐	28 ☐
Color Printer 6 ☐	14 ☐	Vehicle Navigation System 22 ☐	29 ☐
Modem 7 ☐	15 ☐	Vehicle Security System 23 ☐	30 ☐
Large Screen TV (35" or larger) 8 ☐	16 ☐		

12 Is this your first Clarion purchase? 1 ☐ 1st purchase 2 ☐ 2nd purchase 3 ☐ 3rd or more

13 What type of computer do you own?

1 ☐ IBM PC or Clone 2 ☐ Macintosh or Clone 3 ☐ Do Not Own

14 Which on-line service/network do you subscribe to?

1 ☐ America Online 4 ☐ MSN 7 ☐ Other
 2 ☐ CompuServe 5 ☐ Internet 8 ☐ Do not have service/access
 3 ☐ GEnie 6 ☐ Prodigy

ADX SERIES, PRO VIDEO & PRO AUDIO WARRANTY INFORMATION

Clarion offers two-year warranty coverage on ADX Series, Pro Video, and Pro Audio products (excluding speakers) **ONLY** if the product is installed at the same location where purchased. If not installed by the authorized dealer, one-year warranty coverage is provided.

To obtain two-year warranty coverage on your Clarion ADX Series, Pro Video, or Pro Audio product, excluding speakers, complete this section in full and return it along with a copy of your receipt and the attached product registration information in an envelope addressed to:

Clarion Sales Corporation
 P.O. Box 863
 Brea, CA 92822-0863

Retailer/Dealer Name _____

Retailer/Dealer Address _____

City _____ State/Prov _____ Zip/Post Code _____

Retailer/Dealer Phone w/Area Code _____ Date Installed _____ Month _____ Day _____ Year _____

TWO-YEAR WARRANTY NOT VALID UNLESS THE SECTION ABOVE IS COMPLETED IN FULL AND RETURNED WITH A COPY OF YOUR RECEIPT.

CLARION SALES CORPORATION
 PO BOX 863
 BREA CA 92822-0863

Clarion
 CAR AUDIO & BEYOND

Clarion
 CAR AUDIO & BEYOND

Product Registration

for USA and Canada only

IMPORTANT:

1. Detach this section of the card and keep it with your records.
2. Retain your sales receipt to validate warranty service.
3. If you purchased a Clarion ADX Series, Pro Video or Pro Audio product, be sure to complete the box on the last page of this form.

Information on Clarion authorized Warranty Centers may be obtained by writing Clarion Corporation at the address below or by calling

1-800-GO-CLARION.

In USA:
 Clarion Sales Corporation
 Warranty Service Center
 661 West Redondo Beach Blvd.
 Gardena, CA 90247
 (310) 327-9100

In Canada
 Clarion Canada, Inc.
 Warranty Service Center
 2239 Winston Park Drive
 Oakville, Ontario L6H 5R1
 (905)829-4600

www.clarionmultimedia.com

PLEASE RETURN TO:
 HERE
 1-800-GO-CLARION
 P.O. BOX 863
 BREA, CA 92822-0863

clarion WARRANTY INFORMATION

TEAR THIS PAGE OFF AND KEEP IT WITH YOUR RECEIPT!

Model Number										Serial Number										Price Paid (before tax)									
--------------	--	--	--	--	--	--	--	--	--	---------------	--	--	--	--	--	--	--	--	--	-------------------------	--	--	--	--	--	--	--	--	--

Retailer/Dealer Name																													
----------------------	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Retailer/Dealer Phone w/Area Code															Date Installed: Month Day Year														
-----------------------------------	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--------------------------------	--	--	--	--	--	--	--	--	--	--	--	--	--	--

This product is warranted against all defects in material workmanship for a period of one year from the date of original purchase. The conditions of this warranty and the extent of the responsibility of Clarion Corporation under this warranty are as follows:

- PROOF OF DATE OF PURCHASE WILL BE REQUIRED FOR WARRANTY SERVICE OF THIS PRODUCT. INFORMATION ABOUT CLARION AUTHORIZED WARRANTY SERVICE CENTERS MAY ALSO BE OBTAINED BY CONTACTING OR WRITING CLARION CORPORATION AT THE ADDRESS LISTED ON THE FRONT OF THIS CARD.**
- This warranty will become void if service performed by anyone other than an approved Clarion Warranty Service Center results in damage to product.
- This warranty does not apply to any product which has been subject to misuse, neglect or accident, or which has had the serial number altered, defaced or removed, or which has been connected, installed, adjusted or repaired, other than in accordance with the instructions furnished by Clarion Corporation.
- This warranty does not cover car static or other electrical interferences, tape head cleaning or adjustments, or labor costs for the removal or reinstallation of the unit for repair.
- The sole responsibility of Clarion Corporation under this Warranty shall be limited to the repair or replacement thereof, at the sole discretion of Clarion Corporation.
- If it becomes necessary to send the product or any defective part to Clarion Corporation or an authorized warranty service station, the product must be shipped in its original carton or equivalent carton, fully insured, with shipping charges prepaid. Clarion Corporation will not assume any responsibility for any loss or damage incurred in shipping.
- ALL IMPLIED WARRANTIES EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW SHALL HAVE NO GREATER DURATION THAN THE WARRANTY PERIOD SET FORTH ABOVE. UNDER NO CIRCUMSTANCES SHALL CLARION CORPORATION BE LIABLE FOR ANY LOSS OR DAMAGE, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT, BECAUSE SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR EXCLUSIONS OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES. THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.**
- THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.**
- Should you have any difficulties with the performance of this product during warranty, or with any Clarion authorized service centers, you may contact the Clarion National Service Managers at the address listed on the front of this card or call 1-800-GO-CLARION for a listing of Authorized Warranty Service Centers in your area.

281-0607-00

clarion PRODUCT REGISTRATION CARD

Thank you for selecting a high-quality product from Clarion. We hope you are completely satisfied with your purchase. We'd like to help serve you better by finding out more about your reasons for choosing Clarion. Please take a few moments to fill out the registration information on this card and answer a few questions about yourself and your product. Then, return the card to Clarion within 10 days of purchase. Your answers will be kept strictly confidential. We appreciate your response!

In Canada, place the card in an envelope and mail to:
Clarion Canada, Inc., Warranty Service Center, 2239 Winston Park Drive, Oakville, Ontario L6H 5R1.

1 ☐ Mr. ☐ Ms. ☐ Mrs. ☐ Miss

First Name															M.I.					Last Name														
------------	--	--	--	--	--	--	--	--	--	--	--	--	--	--	------	--	--	--	--	-----------	--	--	--	--	--	--	--	--	--	--	--	--	--	--

Mailing Address																									Apt. No.				
-----------------	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	----------	--	--	--	--

City															State/Prov.										Zip/Post Code									
------	--	--	--	--	--	--	--	--	--	--	--	--	--	--	-------------	--	--	--	--	--	--	--	--	--	---------------	--	--	--	--	--	--	--	--	--

Phone w/Area Code															Date of Purchase: Month Day Year														
-------------------	--	--	--	--	--	--	--	--	--	--	--	--	--	--	----------------------------------	--	--	--	--	--	--	--	--	--	--	--	--	--	--

2 What Clarion product did you purchase?

Multimedia

- ☐ 1 Color LCD Display/Control Unit
- ☐ 2 Color LCD Display
- ☐ 3 Cellular Telephone
- ☐ 4 Voice-Activated Navigation System
- ☐ 5 Video Cassette Player
- ☐ 6 TV Tuner
- ☐ 7 Rear Vision Camera

Car Audio

- ☐ 8 AM/FM Cassette
- ☐ 9 AM/FM CD Player
- ☐ 10 AM/FM Cassette/CD Player
- ☐ 11 CD Changer
- ☐ 12 Equalizer/DSP Processor Module
- ☐ 13 Amplifier
- ☐ 14 Speakers

Model Number										Serial Number										Price Paid (before tax)									
--------------	--	--	--	--	--	--	--	--	--	---------------	--	--	--	--	--	--	--	--	--	-------------------------	--	--	--	--	--	--	--	--	--

3 What is the name of the store where you purchased this product?

Retailer/Dealer Name																													
----------------------	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--	--

City															State/Prov.														
------	--	--	--	--	--	--	--	--	--	--	--	--	--	--	-------------	--	--	--	--	--	--	--	--	--	--	--	--	--	--

4 What is your age? (Optional) 1 ☐ 2 ☐ 3 ☐ 4 ☐ 5 ☐ 6 ☐ 7 ☐ 8 ☐ 9 ☐ 10 ☐ 11 ☐ 12 ☐ 13 ☐ 14 ☐ 15 ☐ 16 ☐ 17 ☐ 18 ☐ 19 ☐ 20 ☐ 21 ☐ 22 ☐ 23 ☐ 24 ☐ 25 ☐ 26 ☐ 27 ☐ 28 ☐ 29 ☐ 30 ☐ 31 ☐ 32 ☐ 33 ☐ 34 ☐ 35 ☐ 36 ☐ 37 ☐ 38 ☐ 39 ☐ 40 ☐ 41 ☐ 42 ☐ 43 ☐ 44 ☐ 45 ☐ 46 ☐ 47 ☐ 48 ☐ 49 ☐ 50 ☐ 51 ☐ 52 ☐ 53 ☐ 54 ☐ 55 ☐ 56 ☐ 57 ☐ 58 ☐ 59 ☐ 60 ☐ 61 ☐ 62 ☐ 63 ☐ 64 ☐ 65 ☐ 66 ☐ 67 ☐ 68 ☐ 69 ☐ 70 ☐ 71 ☐ 72 ☐ 73 ☐ 74 ☐ 75 ☐ 76 ☐ 77 ☐ 78 ☐ 79 ☐ 80 ☐ 81 ☐ 82 ☐ 83 ☐ 84 ☐ 85 ☐ 86 ☐ 87 ☐ 88 ☐ 89 ☐ 90 ☐ 91 ☐ 92 ☐ 93 ☐ 94 ☐ 95 ☐ 96 ☐ 97 ☐ 98 ☐ 99 ☐ 100 ☐ 101 ☐ 102 ☐ 103 ☐ 104 ☐ 105 ☐ 106 ☐ 107 ☐ 108 ☐ 109 ☐ 110 ☐ 111 ☐ 112 ☐ 113 ☐ 114 ☐ 115 ☐ 116 ☐ 117 ☐ 118 ☐ 119 ☐ 120 ☐ 121 ☐ 122 ☐ 123 ☐ 124 ☐ 125 ☐ 126 ☐ 127 ☐ 128 ☐ 129 ☐ 130 ☐ 131 ☐ 132 ☐ 133 ☐ 134 ☐ 135 ☐ 136 ☐ 137 ☐ 138 ☐ 139 ☐ 140 ☐ 141 ☐ 142 ☐ 143 ☐ 144 ☐ 145 ☐ 146 ☐ 147 ☐ 148 ☐ 149 ☐ 150 ☐ 151 ☐ 152 ☐ 153 ☐ 154 ☐ 155 ☐ 156 ☐ 157 ☐ 158 ☐ 159 ☐ 160 ☐ 161 ☐ 162 ☐ 163 ☐ 164 ☐ 165 ☐ 166 ☐ 167 ☐ 168 ☐ 169 ☐ 170 ☐ 171 ☐ 172 ☐ 173 ☐ 174 ☐ 175 ☐ 176 ☐ 177 ☐ 178 ☐ 179 ☐ 180 ☐ 181 ☐ 182 ☐ 183 ☐ 184 ☐ 185 ☐ 186 ☐ 187 ☐ 188 ☐ 189 ☐ 190 ☐ 191 ☐ 192 ☐ 193 ☐ 194 ☐ 195 ☐ 196 ☐ 197 ☐ 198 ☐ 199 ☐ 200 ☐ 201 ☐ 202 ☐ 203 ☐ 204 ☐ 205 ☐ 206 ☐ 207 ☐ 208 ☐ 209 ☐ 210 ☐ 211 ☐ 212 ☐ 213 ☐ 214 ☐ 215 ☐ 216 ☐ 217 ☐ 218 ☐ 219 ☐ 220 ☐ 221 ☐ 222 ☐ 223 ☐ 224 ☐ 225 ☐ 226 ☐ 227 ☐ 228 ☐ 229 ☐ 230 ☐ 231 ☐ 232 ☐ 233 ☐ 234 ☐ 235 ☐ 236 ☐ 237 ☐ 238 ☐ 239 ☐ 240 ☐ 241 ☐ 242 ☐ 243 ☐ 244 ☐ 245 ☐ 246 ☐ 247 ☐ 248 ☐ 249 ☐ 250 ☐ 251 ☐ 252 ☐ 253 ☐ 254 ☐ 255 ☐ 256 ☐ 257 ☐ 258 ☐ 259 ☐ 260 ☐ 261 ☐ 262 ☐ 263 ☐ 264 ☐ 265 ☐ 266 ☐ 267 ☐ 268 ☐ 269 ☐ 270 ☐ 271 ☐ 272 ☐ 273 ☐ 274 ☐ 275 ☐ 276 ☐ 277 ☐ 278 ☐ 279 ☐ 280 ☐ 281 ☐ 282 ☐ 283 ☐ 284 ☐ 285 ☐ 286 ☐ 287 ☐ 288 ☐ 289 ☐ 290 ☐ 291 ☐ 292 ☐ 293 ☐ 294 ☐ 295 ☐ 296 ☐ 297 ☐ 298 ☐ 299 ☐ 300 ☐ 301 ☐ 302 ☐ 303 ☐ 304 ☐ 305 ☐ 306 ☐ 307 ☐ 308 ☐ 309 ☐ 310 ☐ 311 ☐ 312 ☐ 313 ☐ 314 ☐ 315 ☐ 316 ☐ 317 ☐ 318 ☐ 319 ☐ 320 ☐ 321 ☐ 322 ☐ 323 ☐ 324 ☐ 325 ☐ 326 ☐ 327 ☐ 328 ☐ 329 ☐ 330 ☐ 331 ☐ 332 ☐ 333 ☐ 334 ☐ 335 ☐ 336 ☐ 337 ☐ 338 ☐ 339 ☐ 340 ☐ 341 ☐ 342 ☐ 343 ☐ 344 ☐ 345 ☐ 346 ☐ 347 ☐ 348 ☐ 349 ☐ 350 ☐ 351 ☐ 352 ☐ 353 ☐ 354 ☐ 355 ☐ 356 ☐ 357 ☐ 358 ☐ 359 ☐ 360 ☐ 361 ☐ 362 ☐ 363 ☐ 364 ☐ 365 ☐ 366 ☐ 367 ☐ 368 ☐ 369 ☐ 370 ☐ 371 ☐ 372 ☐ 373 ☐ 374 ☐ 375 ☐ 376 ☐ 377 ☐ 378 ☐ 379 ☐ 380 ☐ 381 ☐ 382 ☐ 383 ☐ 384 ☐ 385 ☐ 386 ☐ 387 ☐ 388 ☐ 389 ☐ 390 ☐ 391 ☐ 392 ☐ 393 ☐ 394 ☐ 395 ☐ 396 ☐ 397 ☐ 398 ☐ 399 ☐ 400 ☐ 401 ☐ 402 ☐ 403 ☐ 404 ☐ 405 ☐ 406 ☐ 407 ☐ 408 ☐ 409 ☐ 410 ☐ 411 ☐ 412 ☐ 413 ☐ 414 ☐ 415 ☐ 416 ☐ 417 ☐ 418 ☐ 419 ☐ 420 ☐ 421 ☐ 422 ☐ 423 ☐ 424 ☐ 425 ☐ 426 ☐ 427 ☐ 428 ☐ 429 ☐ 430 ☐ 431 ☐ 432 ☐ 433 ☐ 434 ☐ 435 ☐ 436 ☐ 437 ☐ 438 ☐ 439 ☐ 440 ☐ 441 ☐ 442 ☐ 443 ☐ 444 ☐ 445 ☐ 446 ☐ 447 ☐ 448 ☐ 449 ☐ 450 ☐ 451 ☐ 452 ☐ 453 ☐ 454 ☐ 455 ☐ 456 ☐ 457 ☐ 458 ☐ 459 ☐ 460 ☐ 461 ☐ 462 ☐ 463 ☐ 464 ☐ 465 ☐ 466 ☐ 467 ☐ 468 ☐ 469 ☐ 470 ☐ 471 ☐ 472 ☐ 473 ☐ 474 ☐ 475 ☐ 476 ☐ 477 ☐ 478 ☐ 479 ☐ 480 ☐ 481 ☐ 482 ☐ 483 ☐ 484 ☐ 485 ☐ 486 ☐ 487 ☐ 488 ☐ 489 ☐ 490 ☐ 491 ☐ 492 ☐ 493 ☐ 494 ☐ 495 ☐ 496 ☐ 497 ☐ 498 ☐ 499 ☐ 500 ☐ 501 ☐ 502 ☐ 503 ☐ 504 ☐ 505 ☐ 506 ☐ 507 ☐ 508 ☐ 509 ☐ 510 ☐ 511 ☐ 512 ☐ 513 ☐ 514 ☐ 515 ☐ 516 ☐ 517 ☐ 518 ☐ 519 ☐ 520 ☐ 521 ☐ 522 ☐ 523 ☐ 524 ☐ 525 ☐ 526 ☐ 527 ☐ 528 ☐ 529 ☐ 530 ☐ 531 ☐ 532 ☐ 533 ☐ 534 ☐ 535 ☐ 536 ☐ 537 ☐ 538 ☐ 539 ☐ 540 ☐ 541 ☐ 542 ☐ 543 ☐ 544 ☐ 545 ☐ 546 ☐ 547 ☐ 548 ☐ 549 ☐ 550 ☐ 551 ☐ 552 ☐ 553 ☐ 554 ☐ 555 ☐ 556 ☐ 557 ☐ 558 ☐ 559 ☐ 560 ☐ 561 ☐ 562 ☐ 563 ☐ 564 ☐ 565 ☐ 566 ☐ 567 ☐ 568 ☐ 569 ☐ 570 ☐ 571 ☐ 572 ☐ 573 ☐ 574 ☐ 575 ☐ 576 ☐ 577 ☐ 578 ☐ 579 ☐ 580 ☐ 581 ☐ 582 ☐ 583 ☐ 584 ☐ 585 ☐ 586 ☐ 587 ☐ 588 ☐ 589 ☐ 590 ☐ 591 ☐ 592 ☐ 593 ☐ 594 ☐ 595 ☐ 596 ☐ 597 ☐ 598 ☐ 599 ☐ 600 ☐ 601 ☐ 602 ☐ 603 ☐ 604 ☐ 605 ☐ 606 ☐ 607 ☐ 608 ☐ 609 ☐ 610 ☐ 611 ☐ 612 ☐ 613 ☐ 614 ☐ 615 ☐ 616 ☐ 617 ☐ 618 ☐ 619 ☐ 620 ☐ 621 ☐ 622 ☐ 623 ☐ 624 ☐ 625 ☐ 626 ☐ 627 ☐ 628 ☐ 629 ☐ 630 ☐ 631 ☐ 632 ☐ 633 ☐ 634 ☐ 635 ☐ 636 ☐ 637 ☐ 638 ☐ 639 ☐ 640 ☐ 641 ☐ 642 ☐ 643 ☐ 644 ☐ 645 ☐ 646 ☐ 647 ☐ 648 ☐ 649 ☐ 650 ☐ 651 ☐ 652 ☐ 653 ☐ 654 ☐ 655 ☐ 656 ☐ 657 ☐ 658 ☐ 659 ☐ 660 ☐ 661 ☐ 662 ☐ 663 ☐ 664 ☐ 665 ☐ 666 ☐ 667 ☐ 668 ☐ 669 ☐ 670 ☐ 671 ☐ 672 ☐ 673 ☐ 674 ☐ 675 ☐ 676 ☐ 677 ☐ 678 ☐ 679 ☐ 680 ☐ 681 ☐ 682 ☐ 683 ☐ 684 ☐ 685 ☐ 686 ☐ 687 ☐ 688 ☐ 689 ☐ 690 ☐ 691 ☐ 692 ☐ 693 ☐ 694 ☐ 695 ☐ 696 ☐ 697 ☐ 698 ☐ 699 ☐ 700 ☐ 701 ☐ 702 ☐ 703 ☐ 704 ☐ 705 ☐ 706 ☐ 707 ☐ 708 ☐ 709 ☐ 710 ☐ 711 ☐ 712 ☐ 713 ☐ 714 ☐ 715 ☐ 716 ☐ 717 ☐ 718 ☐ 719 ☐ 720 ☐ 721 ☐ 722 ☐ 723 ☐ 724 ☐ 725 ☐ 726 ☐ 727 ☐ 728 ☐ 729 ☐ 730 ☐ 731 ☐ 732 ☐ 733 ☐ 734 ☐ 735 ☐ 736 ☐ 737 ☐ 738 ☐ 739 ☐ 740 ☐ 741 ☐ 742 ☐ 743 ☐ 744 ☐ 745 ☐ 746 ☐ 747 ☐ 748 ☐ 749 ☐ 750 ☐ 751 ☐ 752 ☐ 753 ☐ 754 ☐ 755 ☐ 756 ☐ 757 ☐ 758 ☐ 759 ☐ 760 ☐ 761 ☐ 762 ☐ 763 ☐ 764 ☐ 765 ☐ 766 ☐ 767 ☐ 768 ☐ 769 ☐ 770 ☐ 771 ☐ 772 ☐ 773 ☐ 774 ☐ 775 ☐ 776 ☐ 777 ☐ 778 ☐ 779 ☐ 780 ☐ 781 ☐ 782 ☐ 783 ☐ 784 ☐ 785 ☐ 786 ☐ 787 ☐ 788 ☐ 789 ☐ 790 ☐ 791 ☐ 792 ☐ 793 ☐ 794 ☐ 795 ☐ 796 ☐ 797 ☐ 798 ☐ 799 ☐ 800 ☐ 801 ☐ 802 ☐ 803 ☐ 804 ☐ 805 ☐ 806 ☐ 807 ☐ 808 ☐ 809 ☐ 810 ☐ 811 ☐ 812 ☐ 813 ☐ 814 ☐ 815 ☐ 816 ☐ 817 ☐ 818 ☐ 819 ☐ 820 ☐ 821 ☐ 822 ☐ 823 ☐ 824 ☐ 825 ☐ 826 ☐ 827 ☐ 828 ☐ 829 ☐ 830 ☐ 831 ☐ 832 ☐ 833 ☐ 834 ☐ 835 ☐ 836 ☐ 837 ☐ 838 ☐ 839 ☐ 840 ☐ 841 ☐ 842 ☐ 843 ☐ 844 ☐ 845 ☐ 846 ☐ 847 ☐ 848 ☐ 849 ☐ 850 ☐ 851 ☐ 852 ☐ 853 ☐ 854 ☐ 855 ☐ 856 ☐ 857 ☐ 858 ☐ 859 ☐ 860 ☐ 861 ☐ 862 ☐ 863 ☐ 864 ☐ 865 ☐ 866 ☐ 867 ☐ 868 ☐ 869 ☐ 870 ☐ 871 ☐ 872 ☐ 873 ☐ 874 ☐ 875 ☐ 876 ☐ 877 ☐ 878 ☐ 879 ☐ 880 ☐ 881 ☐ 882 ☐ 883 ☐ 884 ☐ 885 ☐ 886 ☐ 887 ☐ 888 ☐ 889 ☐ 890 ☐ 891 ☐ 892 ☐ 893 ☐ 894 ☐ 895 ☐ 896 ☐ 897 ☐ 898 ☐ 899 ☐ 900 ☐ 901 ☐ 902 ☐ 903 ☐ 904 ☐ 905 ☐ 906 ☐ 907 ☐ 908 ☐ 909 ☐ 910 ☐ 911 ☐ 912 ☐ 913 ☐ 914 ☐ 915 ☐ 916 ☐ 917 ☐ 918 ☐ 919 ☐ 920 ☐ 921 ☐ 922 ☐ 923 ☐ 924 ☐ 925 ☐ 926 ☐ 927 ☐ 928 ☐ 929 ☐ 930 ☐ 931 ☐ 932 ☐ 933 ☐ 934 ☐ 935 ☐ 936 ☐ 937 ☐ 938 ☐ 939 ☐ 940 ☐ 941 ☐ 942 ☐ 943 ☐ 944 ☐ 945 ☐ 946 ☐ 947 ☐ 948 ☐ 949 ☐ 950 ☐ 951 ☐ 952 ☐ 953 ☐ 954 ☐ 955 ☐ 956 ☐ 957 ☐ 958 ☐ 959 ☐ 960 ☐ 961 ☐ 962 ☐ 963 ☐ 964 ☐ 965 ☐ 966 ☐ 967 ☐ 968 ☐ 969 ☐ 970 ☐ 971 ☐ 972 ☐ 973 ☐ 974 ☐ 975 ☐ 976 ☐ 977 ☐ 978 ☐ 979 ☐ 980 ☐ 981 ☐ 982 ☐ 983 ☐ 984 ☐ 985 ☐ 986 ☐ 987 ☐ 988 ☐ 989 ☐ 990 ☐ 991 ☐ 992 ☐ 993 ☐ 994 ☐ 995 ☐ 996 ☐ 997 ☐ 998 ☐ 999 ☐ 1000 ☐ 1001 ☐ 1002 ☐ 1003 ☐ 1004 ☐ 1005



ACTIVATE NOW YOU'LL NEVER WANT TO LEAVE YOUR CAR

GET READY FOR 100 CHANNELS OF THE BEST IN-CAR ENTERTAINMENT.

You've just purchased a Sirius Satellite Radio receiver that's going to plug you into 60 original music channels, from today's hits to R&B oldies to classical masterpieces. From authentic country and real bluegrass to cool jazz, hot latin, reggae and rock. Plus 40 channels of world-class sports, news and entertainment, like ESPN, Radio Disney, E! Entertainment Radio, CNBC, Fox News and Discovery Radio.

At Sirius, the emphasis is on the music and entertainment you want. From now on, it's just you, the road and the music.

ONLY FROM SIRIUS —


- 100 channels of digital entertainment, coast-to-coast
- 60 original music channels, all commercial-free
- 40 world-class sports, news and entertainment channels
- S>PLEX technology for superior sound resolution

EXPERIENCE SIRIUS IN TWO SIMPLE STEPS.

If you haven't already activated your Sirius receiver, here's how:

1. Contact us at siriusradio.com or call toll-free 1-888-539-SIRIUS (7474).
2. Have 3 items on hand:
 - A valid credit card or branded debit card
 - Sirius ID or Electronic Serial Number (check on the receiver box or your display control window)
 - Your vehicle identification number (VIN)

Activate today to get 100% commercial-free music, plus a Welcome Kit with a detailed Channel Guide.

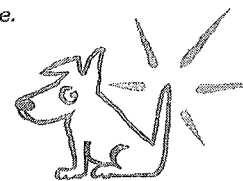

SIRIUS
Satellite Radio



SIRIUS
SPORTS

SIRIUS
ENTERTAINMENT


SIRIUS
NEWS

SIRIUS
HISPANIC TALK

SIRIUS
VARIETY



SIRIUS
Satellite Radio

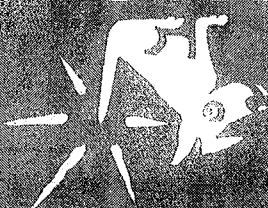

100%
COMMERCIAL-FREE
MUSIC

YOUR NEW RECEIVER IS READY FOR

60 ORIGINAL MUSIC CHANNELS, ALL COMMERCIAL-FREE. PLUS 40 WORLD-CLASS SPORTS, NEWS AND ENTERTAINMENT CHANNELS

SIRIUS POP

- 1 Top 40 Hits
- 2 Adult Contemporary
- 3 Alt Pop Mix
- 4 Love Songs
- 5 The Best of the 50s/60s
- 7 The Best of the 70s
- 8 The Best of the 80s
- 9 The Best of the 90s

SIRIUS ROCK

- 15 Soft Rock
- 17 Eclectic Rock
- 20 Rock Hits
- 21 Modern Rock
- 22 Mainstream Rock
- 23 Classic Rock I
- 24 Classic Rock II
- 25 Classic Alternative
- 26 Alternative I
- 27 Alternative II
- 29 Hard Rock

SIRIUS COUNTRY

- 30 Country Hits
- 31 Today's Country
- 32 Country Mix
- 35 Classic Country
- 36 Alt Country
- 37 Bluegrass

SIRIUS R&B/URBAN

- 40 R&B Hits
- 42 Today's R&B
- 43 Soul Ballads
- 44 Classic Soul
- 45 R&B Oldies
- 47 Rap Hits
- 48 Today's Rap
- 49 Classic Rap

SIRIUS DANCE

- 50 Dance Hits
- 51 Mainstream Dance
- 53 Electronica
- 56 Disco

SIRIUS CLASSIC

- 60 Classic Jazz
- 61 Latin Jazz
- 62 Contemporary Jazz
- 63 Smooth Jazz
- 65 Standards
- 66 Swing
- 67 Broadway's Best

SIRIUS LATIN

- 70 Latin Hits
- 71 Latin Pop Mix
- 72 Rock en Español
- 74 Mexicana
- 77 Tejano

SIRIUS CLASSICAL

- 80 Symphonic
- 82 Chamber Works
- 85 Classical Voices

SIRIUS SPECIALTY

- 90 Blues
- 91 Reggae
- 93 Gospel
- 94 Christian Hits
- 95 World Music
- 96 New Age
- 99 Kids
- 100 Specialty Showcase

SIRIUS NEWS

- 101 CNBC
- 102 FOX News Channel
- 104 CNN Headline News
- 105 Bloomberg
- 107 NPR Now
- 108 NPR Talk
- 109 PRI's Public Radio Channel
- 111 World Radio Network
- 112 BBC World Service News
- 114 C-SPAN Radio
- 115 The Weather Channel Radio Network
- 116 Sirius Talk
- 117 Real Sirius
- 119 ABC News & Talk

SIRIUS SPORTS

- 120 ESPN Radio Network
- 121 ESPNNews
- 123 Sports Byline USA
- 124 Speedvision
- 125 OLN Adventure Radio

SIRIUS ESPANOL

- 140 BBC Mundo
- 142 La Red Hispana
- 144 Radio Deportivo
- 146 Radio Mujer
- 147 Radio Amigo

SIRIUS ENTERTAINMENT

- 150 Radio Disney
- 151 Discovery Radio
- 152 E! Entertainment Radio
- 154 A&E Satellite Radio
- 156 Radio Classics
- 158 SCI FI
- 159 Sirius Entertainment
- 160 Sirius Comedy
- 161 Sirius Arts
- 164 Personal Achievement
- 165 Wisdom Radio
- 167 African American Talk
- 168 The Scandal Channel
- 172 Women's Talk
- 175 Guy Talk
- 180 Trucker Channel
- 184 Preview Channel



©2002 Sirius Satellite Radio Inc.

285-1887-00

siriusradio.com

clarion

100 CHANNELS OF THE
BEST ENTERTAINMENT ON THE ROAD

WELCOME TO
SIRIUS SATELLITE RADIO